

## Regulatory compliance and safety information

Thank you for choosing to buy a Dyson air purifier  
To read your safety instructions and guarantee  
terms and conditions:

For English, go to page 2

For ANZ, go to page 6

For India, go to page 11

For UAE, go to page 15

## الامتثال التنظيمي ومعلومات السلامة

شكراً لشرايك مروحة دايسون لتنقية الهواء  
للاطلاع على تعليمات السلامة وشروط الضمان باللغة  
العربية، يرجى الانتقال إلى الصفحة 23.

BP02 YY / BP02 ZZ

BP03 YY / BP03 ZZ

BP04 YY / BP04 ZZ

# EN IMPORTANT SAFETY INSTRUCTIONS

## WARNING

THE APPLIANCE AND THE REMOTE CONTROL BOTH CONTAIN MAGNETS.

1. Implanted medical devices such as pacemakers and defibrillators may be affected by strong magnetic fields. If you or someone in your household has an implanted medical device or defibrillator, avoid placing the remote control in a pocket or near to the device.
2. Credit cards and electronic storage media may also be affected by magnets and should be kept away from the remote control and the top of the appliance.

TO REDUCE THE RISK OF FIRE,  
ELECTRIC SHOCK, OR INJURY:

3. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or reasoning capabilities, or lack of experience and knowledge, only if they have been given supervision or instruction by a responsible person concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
4. Do not use outdoors or on wet surfaces and do not handle any part of the appliance or plug with wet hands.

5. Keep the appliance away from flammable liquids, vapours, air fresheners and essential oils.
6. Always plug directly into a wall socket. Never use with an extension cable as overloading may result in the cable overheating and catching fire.
7. Do not use this appliance if it has been damaged or submerged in water.
8. Keep this appliance and cable away from heated surfaces. Do not position the cable under furniture or appliances.
9. Do not put any objects into any openings as this may cause an electric shock or fire or damage the appliance.
10. Always carry this appliance by the base.
11. This product is not designed to bear the weight of a person and may topple over causing injury. Do not stand, sit or lean on the product.
12. If there is a loose fit between the plug and the socket or the plug becomes very hot, the socket may need to be replaced. Check with a qualified electrician to replace the socket.
13. Disconnect power or unplug before cleaning, performing any maintenance or replacing a filter. Always unplug the appliance when not in use.
14. This appliance contains a Class 1 laser. Unintended use of the appliance or damage to the housing may result in the escape of dangerous laser radiation. Do not stare at the light source. Laser radiation may, even in little doses, cause harm to the eyes and skin. Do not attempt to modify or disassemble the laser tube.

15. If the supply cable is damaged, it must be replaced or repaired by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
16. **WARNING.** Chemical Burn and Choking Hazard. Keep batteries away from Children (whether the battery is new or used). This product contains a lithium button/coin cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours or less. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep it away from children. If you think a battery might have been swallowed or placed inside any part of the body, seek immediate medical attention. The button/coin battery is located inside the remote control.

## READ AND SAVE THESE INSTRUCTIONS

### Additional information

#### Control without the remote

- Your machine can be controlled through the MyDyson™ app.

#### Maintaining your machine

- To always get the best performance from your machine, it's important to regularly clean it and check for blockages.

#### Cleaning your machine

- If dust accumulates on the surface of your machine, wipe the shrouds and other parts with a clean, dry cloth only.
- Look for blockages in the air inlet holes on the shroud.
- Use a soft brush to remove dust and debris.
- Don't use detergents or polishes to clean your machine.

#### Replaceable parts

- Your machine has replaceable filter units and batteries, any other servicing must be carried out by an authorised service representative.

## Battery replacement



### Caution

- Unscrew the battery compartment on the remote control. Loosen the base and pull to remove the battery.
- Do not install backwards or short circuit the batteries.
- Do not attempt to dismantle or charge the batteries. Keep away from fire.
- Follow battery manufacturers' instructions when installing new batteries (battery type CR 2032).
- Always replace the screw in the remote control and refer to the battery hazard in the warning section.

### Non-washable filter units

- Your filter units are non-washable and non-recyclable.
- Failure to replace your filter units when prompted may result in changes to product performance and appearance.
- Replacement filter units can be purchased at [www.dyson.com](http://www.dyson.com) or via the MyDyson™ app.

### Auto mode

- A period of six days is required after your machine is first used for the sensor to calibrate. During this period, your machine may be more sensitive to VOCs (such as odors) than normal.
- During first use, whilst the sensors calibrate, your machine can take up to two minutes to show VOC and NO<sub>2</sub> data.

### Wi-Fi connectivity

Wi-Fi is on by default. To turn the Wi-Fi on or off, press and hold the Standby on/off button on your machine for five seconds.

### MyDyson™ app connectivity

- You must have a live internet connection in order for the MyDyson™ app to work.
- Your machine can connect to either 2.4GHz or 5GHz networks which includes most modern routers. Check your router documentation for compatibility.
- Dyson endeavours to ensure that our technology is compatible with current operating systems, but this is not guaranteed. If you have any questions or would like to check the latest compatibility, please contact the Dyson Helpline.
- Your mobile device must have Bluetooth® wireless technology 4.0 support (Bluetooth® wireless technology Low Energy) in order to set up a connection with the machine. Check your device specification for compatibility.
- BLE/Wi-Fi 2.4GHz, X.XW max
- Wi-Fi 5GHz, X.XW max
- Networked standby: 2.0W

### Conformity information

- Hereby, Dyson declares that this environmental control radio equipment is in compliance with Directive 2014/53/EU.
- The full text of the EU Declaration of Conformity is available at the following internet address:
- [www.dyson.co.uk/inside-dyson/terms/compliance](http://www.dyson.co.uk/inside-dyson/terms/compliance) (GB)
- [www.dyson.ie/inside-dyson/terms/compliance](http://www.dyson.ie/inside-dyson/terms/compliance) (IE)
- Bluetooth 2.4GHz, 0.02W max

### Disposal information

- Dyson products are made from high grade recyclable materials. Recycle where possible.
- Dispose of or recycle the battery in accordance with local ordinances or regulations.



- This symbol indicates that this machine should not be disposed with your general household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. When this machine has reached the end of its serviceable life, please take it to a recognised WEEE (Waste Electrical and Electronic Equipment) collection facility such as your local civic amenity site for recycling. Your local authority or retailer will be able to advise you of your nearest recycling facility.
- Keep the used batteries away from children as these can still harm children if swallowed.
- Your filter units are non-washable and non-recyclable.
- Dispose of the exhausted filter unit(s) in accordance with local ordinances or regulations.
- The battery should be removed from the machine before disposal.

### Limited 2-year guarantee

Terms and conditions of the Dyson 2-year limited guarantee are set out below. The name and address details of the Dyson guarantor for your country are set out elsewhere in this document – please refer to the table setting out these details.

### What is covered

- The repair or replacement of your Dyson machine (at Dyson's discretion) if it is found to be defective due to faulty materials, workmanship or function within two years of purchase or delivery (if any part is no longer available or out of manufacture, Dyson will replace it with a functional replacement part).

- Where this machine is sold outside of the EU, this guarantee will only be valid if the machine is used in the country in which it was sold.
- Where this machine is sold within the EU, this guarantee will only be valid (i) if the machine is used in the country in which it was sold or (ii) if the machine is used in Austria, Belgium, Denmark, Finland, France, Germany, Ireland, Italy, Netherlands, Norway, Poland, Spain, Sweden, Switzerland or the United Kingdom and the same model as this machine is sold at the same voltage rating in the relevant country.

#### What is not covered

- Replacement filter units. The machine's filter units are not covered by the guarantee.

Dyson does not guarantee the repair or replacement of a product where a defect is the result of:

- Damage caused by not carrying out the recommended machine maintenance.
- Accidental damage, faults caused by negligent use or care, misuse, neglect, carelessness or operation or handling of the machine which is not in accordance with the Dyson User manual.
- Use of the machine for anything other than normal domestic household purposes.
- Use of parts not assembled or installed in accordance with the instructions of Dyson.
- Use of parts and accessories which are not genuine Dyson components.
- Faulty installation (except where installed by Dyson).
- Repairs or alterations carried out by parties other than Dyson or its authorised agents.
- Blockages – Refer to the Dyson User manual for details on how to look for and clear blockages.
- Normal wear and tear (e.g. fuse etc.).
- Reduction in battery discharge time due to battery age or use (where applicable).

If you are in any doubt as to what is covered by your guarantee, please contact the Dyson Helpline.

#### Summary of cover

- The guarantee becomes effective from the date of purchase (or the date of delivery if this is later).
- You must provide proof of (both the original and any subsequent) delivery/purchase before any work can be carried out on your Dyson machine. Without this proof, any work carried out will be chargeable. Keep your receipt or delivery note.
- All work will be carried out by Dyson or its authorised agents.
- Any parts which are replaced by Dyson will become the property of Dyson.
- The repair or replacement of your Dyson machine under guarantee will not extend the period of guarantee unless this is required by local law in the country of purchase.
- The guarantee provides benefits which are additional to and do not affect your statutory rights as a consumer and will apply whether you purchased your product directly from Dyson or from a third party.

# ANZ IMPORTANT SAFETY INSTRUCTIONS

## WARNING

### THE APPLIANCE AND THE REMOTE CONTROL BOTH CONTAIN MAGNETS.



1. Implanted medical devices such as pacemakers and defibrillators may be affected by strong magnetic fields. If you or someone in your household has an implanted medical device or defibrillator,

avoid placing the remote control in a pocket or near to the device.

2. Credit cards and electronic storage media may also be affected by magnets and should be kept away from the remote control and the top of the appliance.

#### TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
4. Do not use outdoors or on wet surfaces and do not handle any part of the appliance or plug with wet hands.
5. Keep the appliance away from flammable liquids, vapours, air fresheners and essential oils.
6. Always plug directly into a wall socket. Never use with an extension cable as overloading may result in the cable overheating and catching fire.
7. Do not use this appliance if it has been damaged or submerged in water.
8. This product is not designed to bear the weight of a person and may topple over causing injury. Do not stand, sit or lean on the product.
9. Keep this appliance and cable away from heated surfaces. Do not position the cable under furniture or appliances.

10. Do not put any objects into any openings as this may cause an electric shock or fire or damage the appliance.
11. Always carry this appliance by the base.
12. If there is a loose fit between the plug and the socket or the plug becomes very hot, the socket may need to be replaced. Check with a qualified electrician to replace the socket.
13. Disconnect power or unplug before cleaning, performing any maintenance or replacing a filter. Always unplug the appliance when not in use.
14. This appliance contains a Class 1 laser. Unintended use of the appliance or damage to the housing may result in the escape of dangerous laser radiation. Do not stare at the light source. Laser radiation may, even in little doses, cause harm to the eyes and skin. Do not attempt to modify or disassemble the laser tube.
15. If the supply cable is damaged, it must be replaced or repaired by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
16. **WARNING.** Chemical Burn and Choking Hazard. Keep batteries away from Children   (whether the battery is new or used). This product contains a lithium button/coin cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours or less. Always completely secure the battery compartment. If the battery



compartment does not close securely, stop using the product, remove the batteries, and keep it away from children. If you think a battery might have been swallowed or placed inside any part of the body, seek immediate medical attention. The button/coin battery is located inside the remote control.

# READ AND SAVE THESE INSTRUCTIONS

## Additional information

### Control without the remote

- Your machine can be controlled through the MyDyson™ app.

### Maintaining your machine

- To always get the best performance from your machine, it's important to regularly clean it and check for blockages.

### Cleaning your machine

- If dust accumulates on the surface of your machine, wipe the shrouds and other parts with a clean, dry cloth only.
- Look for blockages in the air inlet holes on the shroud.
- Use a soft brush to remove dust and debris.
- Don't use detergents or polishes to clean your machine.

### Replaceable parts

- Your machine has replaceable filter units and batteries, any other servicing must be carried out by an authorised service representative.

### Battery replacement



#### CAUTION

- Unscrew the battery compartment on the remote control. Loosen the base and pull to remove the battery.
- Do not install backwards or short circuit the batteries.
- Do not attempt to dismantle or charge the batteries. Keep away from fire.
- Follow battery manufacturers' instructions when installing new batteries (battery type CR 2032).
- Always replace the screw in the remote control and refer to the battery hazard in the warning section.

### Non-washable filter units

- Your filter units are non-washable and non-recyclable.
- Failure to replace your filter units when prompted may result in changes to product performance and appearance.
- Replacement filter units can be purchased at [www.dyson.com.au/support](http://www.dyson.com.au/support) (AU) or [www.dyson.co.nz/support](http://www.dyson.co.nz/support) (NZ) or via the MyDyson™ app.

### Auto mode

- A period of six days is required after your machine is first used for the sensor to calibrate. During this period, your machine may be more sensitive to VOCs (such as odours) than normal.
- During first use, whilst the sensors calibrate, your machine can take up to two minutes to show VOC and NO<sub>2</sub> data.

### Wi-Fi connectivity

Wi-Fi is on by default. To turn the Wi-Fi on or off, press and hold the Standby on/off button on your machine for five seconds.

### MyDyson™ app connectivity

- You must have a live Internet connection in order for the MyDyson™ app to work.
- Your machine can connect to either 2.4GHz or 5GHz networks which includes most modern routers. Check your router documentation for compatibility.
- Dyson endeavours to ensure that our technology is compatible with current operating systems, but this is not guaranteed. If you have any questions or would like to check the latest compatibility, please contact the Dyson Helpline.

- Your mobile device must have Bluetooth® wireless technology 4.0 support (Bluetooth® wireless technology Low Energy) in order to set up a connection with your machine. Check your device specification for compatibility.
- BLE/Wi-Fi 2.4GHz
- Wi-Fi 5GHz

#### Disposal information

Dyson products are made from high-grade recyclable materials. Please dispose of this product responsibly and recycle where possible. When your Dyson machine reaches the end of its life, we can assist with its safe disposal. You can send your old Dyson machine back to us (at our cost) and we will organise for it to be recycled.\*

\*Please note that not all parts are recyclable. Recycling of parts is subject to the capabilities of third party suppliers.

Simply:

1. Please contact the Dyson Helpline on 1800 239 766 (Australia) or 0800 397 667 (New Zealand).
2. Provide the serial number of your old Dyson machine.
3. Dyson Helpline staff will arrange a reply-paid shipping label to be emailed.
4. Box up your old Dyson machine.
5. Print and attach the provided reply-paid shipping label on the external of the box.
6. Write "Dyson We Recycle" on the external of the box.
7. Take the package to your local post office to send the machine back to us.
  - Keep the used batteries away from children as these can still harm children if swallowed.
  - Your filter units are non-washable and non-recyclable.
  - Dispose of the exhausted filter unit(s) in accordance with local ordinances or regulations.
  - The battery should be removed from the machine before disposal.

#### Australian Consumer law

In Australia, your Dyson machine comes with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have your Dyson machine repaired or replaced if it fails to be of acceptable quality and the failure does not amount to a major failure. All rights under the Dyson guarantee are in addition to your rights under the Australian Consumer Law. You can find more information about your rights by visiting the ACCC's website.

#### New Zealand Consumer Law

Under the New Zealand Consumer Guarantees Act 1993, if the product is not of acceptable quality but that defect is not substantial, Dyson may choose whether to repair or replace the product. If a repair will be difficult, Dyson may instead provide you with a refund. If a product's defect is substantial or cannot be fixed, you can ask for either a refund, replacement product, or compensation for any reduction in that product's value. You are also entitled to compensation for any other reasonably foreseeable loss caused by that substantial defect.

#### Dyson 2-year guarantee

Terms and conditions of the Dyson 2-year guarantee

##### What is covered

- The repair or replacement of your Dyson machine (at Dyson's discretion) if it is found to be defective due to faulty materials, workmanship or function within two years of purchase (if any part is no longer available or out of manufacture, Dyson will replace it with a functional replacement part).
- This Dyson guarantee will only be valid if the machine is used in the country in which it was sold.

##### What is not covered

- Replacement filter units. The machine's filter units are not covered by the guarantee.

Under your Dyson guarantee, Dyson shall not be liable for costs of repair or replacement of a product incurred as a result of:

- Damage caused by not carrying out the recommended machine maintenance.
- Accidental damage, faults caused by negligent use or care, misuse, neglect, careless operation or handling of the Dyson machine which is not in accordance with your Dyson User manual.
- Use of the Dyson machine for anything other than normal domestic purposes in the country of purchase.
- Use of parts not assembled or installed in accordance with the instructions of Dyson.
- Use of parts and accessories other than those produced or recommended by Dyson.
- Faulty installation (except where installed by Dyson).
- Repairs or alterations carried out by parties other than Dyson or its authorised agents.
- Blockages – Refer to the Dyson User manual for details on how to look for and clear blockages.
- Normal wear and tear (e.g. fuse etc.).
- Reduction in battery discharge time due to battery age or use (cordless machines only).
- Whether or not the Dyson guarantee applies, you may have rights and remedies available to you under Australian or New Zealand Consumer Law.

#### Other terms relating to the Dyson guarantee

- The Dyson guarantee becomes effective from the date of purchase.
- All work will be carried out by Dyson Appliances (Aust.) Pty Limited, Dyson New Zealand Limited (NZ) or their authorised agents.
- Any parts replaced by Dyson or its service agents will become the property of Dyson Appliances (Aust.) Pty Limited or Dyson New Zealand Limited (NZ).
- You must provide proof of purchase for your Dyson machine in order to make a claim under the Dyson guarantee.
- Under the Dyson guarantee, the repair, replacement and any associated delivery charges (both to and from Dyson) will be at no cost to you.
- Whether or not the Dyson guarantee applies, you may have rights and remedies available to you under Australian or New Zealand Consumer Law.

#### Important data protection information

You will need to provide us with basic contact information when you register your Dyson machine or via the MyDyson™ app.

When registering your Dyson machine:

- You will need to provide us with basic contact information to register your machine and enable us to support your Dyson guarantee.

When registering via the MyDyson™ app:

- You will need to provide us with basic contact information to register the MyDyson™ app. This enables us to securely link your machine to your instance of the app.
- When you register, you will have the opportunity to choose whether you would like to receive communications from us. If you opt-in to communications from Dyson, we will send you details of special offers and news of our latest innovations.
- We never sell your information to third parties and only use information that you share with us as defined by our privacy policies which are available on our website [privacy.dyson.com](http://privacy.dyson.com).

# IN IMPORTANT SAFETY INSTRUCTIONS

## WARNING

THE APPLIANCE AND THE REMOTE CONTROL BOTH CONTAIN MAGNETS.

1. Implanted medical devices such as pacemakers, and defibrillators may be affected by strong magnetic fields. If you or someone in your household has an implanted medical device or defibrillator, avoid placing the remote control in a pocket or near to the device.
2. Credit cards and electronic storage media may also be affected by magnets and should be kept away from the remote control and the top of the appliance.

TO REDUCE THE RISK OF FIRE,  
ELECTRIC SHOCK, OR INJURY:

3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
4. Do not use outdoors or on wet surfaces and do not handle any part of the appliance or plug with wet hands.
5. Keep the appliance away from flammable liquids, vapours, air fresheners and essential oils.
6. Always plug directly into a wall socket. Never use with an extension cable as overloading may result in the cable overheating and catching fire.
7. Do not use this appliance if it has been damaged or submerged in water.
8. Keep this appliance and cable away from heated surfaces. Do not position the cable under furniture or appliances.
9. Do not put any objects into any openings as this may cause an electric shock or fire or damage the appliance.
10. Always carry this appliance by the base.
11. This product is not designed to bear the weight of a person and may topple over causing injury. Do not stand, sit or lean on the product.
12. If there is a loose fit between the plug and the socket or the plug becomes very hot, the socket may need to be replaced. Check with a qualified electrician to replace the socket.

13. Disconnect power or unplug before cleaning, performing any maintenance or replacing a filter. Always unplug the appliance when not in use.
14. This appliance contains a Class 1 laser. Unintended use of the appliance or damage to the housing may result in the escape of dangerous laser radiation. Do not stare at the light source. Laser radiation may, even in little doses, cause harm to the eyes and skin. Do not attempt to modify or disassemble the laser tube.
15. If the supply cable is damaged, it must be replaced or repaired by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
16. Chemical Burn and Choking Hazard. Keep batteries away from children. This product contains a lithium button/coin cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

**READ AND  
SAVE THESE  
INSTRUCTIONS**

## Additional information

### Control without the remote

- Your machine can be controlled through the MyDyson™ app.

### Maintaining your machine

- To always get the best performance from your machine, it's important to regularly clean it and check for blockages.

### Cleaning your machine

- If dust accumulates on the surface of your machine, wipe the shrouds and other parts with a clean, dry cloth only.
- Look for blockages in the air inlet holes on the shroud.
- Use a soft brush to remove dust and debris.
- Don't use detergents or polishes to clean your machine.

### Replaceable parts

- Your machine has replaceable filter units and batteries, any other servicing must be carried out by an authorised service representative.

### Battery replacement



#### Caution

- Unscrew the battery compartment on the remote control. Loosen the base and pull to remove the battery.
- Do not install backwards or short circuit the batteries.
- Do not attempt to dismantle or charge the batteries. Keep away from fire.
- Follow battery manufacturers' instructions when installing new batteries (battery type CR 2032).
- Always replace the screw in the remote control and refer to the battery hazard in the warning section.

### Non-washable filter units

- Your filter units are non-washable and non-recyclable.
- Failure to replace the filter units when prompted may result in changes to product performance and appearance.
- Replacement filter units can be purchased at [www.dyson.in](http://www.dyson.in) or via the MyDyson™ app.

### Auto mode

- A period of six days is required after your machine is first used for the sensor to calibrate. During this period, your machine may be more sensitive to VOCs (such as odours) than normal.
- During first use, whilst the sensors calibrate, your machine can take up to two minutes to show VOC and NO<sub>2</sub> data.

### Wi-Fi connectivity

Wi-Fi is on by default. To turn the Wi-Fi on or off, press and hold the Standby on/off button on your machine for five seconds.

### MyDyson™ app connectivity

- You must have a live internet connection in order for the MyDyson™ app to work.
- Your machine can connect to either 2.4GHz or 5GHz networks which includes most modern routers. Check your router documentation for compatibility.
- Dyson endeavours to ensure that our technology is compatible with current operating systems but this is not guaranteed. If you have any questions or would like to check the latest compatibility, please contact the Dyson Helpline.
- Your mobile device must have Bluetooth® wireless technology 4.0 support (Bluetooth® wireless technology Low Energy) in order to set up a connection with your machine. Check your device specification for compatibility.
- BLE/Wi-Fi 2.4GHz
- Wi-Fi 5GHz

### Disposal information

- Dyson products are made from high grade recyclable materials. Recycle where possible.
- Dispose of or recycle the battery in accordance with local ordinances or regulations.
- The battery should be removed for separate recycling.
- Keep the used batteries away from children as these can still harm children if swallowed.
- Your filter units are non-washable and non-recyclable.
- Dispose of the exhausted filter unit(s) in accordance with local ordinances or regulations.
- The battery should be removed from the machine before disposal.

### Limited 2-year warranty

Terms and conditions of the Dyson 2-year limited warranty.

#### What is covered

- The repair or replacement of your Dyson machine (at Dyson's discretion) if it is found to be defective due to faulty materials, workmanship or function within two years of purchase or delivery (if any part is no longer available or out of manufacture, Dyson will replace it with a functional replacement part).
- This warranty will only be valid if the machine is used in the country in which it was sold.

#### What is not covered

- Replacement filter units. The machine's filter units are not covered by the warranty.

Dyson does not guarantee the repair or replacement of a product where a defect is the result of:

- Damage caused by not carrying out the recommended machine maintenance.
- Accidental damage, faults caused by negligent use or care, misuse, neglect, carelessness or operation or handling of the machine which is not in accordance with the Dyson User manual.
- Use of the machine for anything other than normal domestic household purposes.
- Use of parts not assembled or installed in accordance with the instructions of Dyson.
- Use of parts and accessories which are not genuine Dyson components.
- Faulty installation (except where installed by Dyson).
- Repairs or alterations carried out by parties other than Dyson or its authorised agents.
- Blockages – Refer to the Dyson User manual for details on how to look for and clear blockages.
- Normal wear and tear (e.g. fuse etc.).
- Reduction in battery discharge time due to battery age or use (where applicable).

If you are in any doubt as to what is covered by your warranty, please contact the Dyson Helpline.

#### Summary of cover

- The warranty becomes effective from the date of purchase (or the date of delivery if this is later).
- You must provide proof of (both the original and any subsequent) delivery/purchase before any work can be carried out on your Dyson machine. Without this proof, any work carried out will be chargeable. Keep your receipt or delivery note.
- All work will be carried out by Dyson or its authorised agents.
- Any parts which are replaced by Dyson will become the property of Dyson.
- The repair or replacement of your Dyson machine under warranty will not extend the period of warranty.
- The warranty provides benefits which are additional to and do not affect your statutory rights as a consumer.

#### Important data protection information

When registering your Dyson machine:

- You will need to provide us with basic contact information to register your machine and enable us to support your warranty.
- When you register, you will have the opportunity to choose whether you would like to receive communications from us. If you opt-in to communications from Dyson, we will send you details of special offers and news of our latest innovations.
- We never sell your information to third parties and only use information that you share with us as defined by our privacy policies which are available on our website at [privacy.dyson.com](http://privacy.dyson.com).

# ENAR IMPORTANT SAFETY INSTRUCTIONS

## WARNING

THE APPLIANCE AND THE REMOTE  
CONTROL BOTH CONTAIN  
MAGNETS.

1. Implanted medical devices such as pacemakers and defibrillators may be affected by strong magnetic

- fields. If you or someone in your household has an implanted medical device or defibrillator, avoid placing the remote control in a pocket or near to the device.
2. Credit cards and electronic storage media may also be affected by magnets and should be kept away from the remote control and the top of the appliance.

**TO REDUCE THE RISK OF FIRE,  
ELECTRIC SHOCK, OR INJURY:**

3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
4. Do not use outdoors or on wet surfaces and do not handle any part of the appliance or plug with wet hands.
5. Keep the appliance away from flammable liquids, vapours, air fresheners and essential oils.
6. Always plug directly into a wall socket. Never use with an extension cable as overloading may result in the cable overheating and catching fire.
7. Do not use this appliance if it has been damaged or submerged in water.
8. Keep this appliance and cable away from heated surfaces. Do not position the cable under furniture or appliances.
9. Do not put any objects into any openings as this may cause an



electric shock or fire or damage the appliance.

10. Always carry this appliance by the base.
11. This product is not designed to bear the weight of a person and may topple over causing injury. Do not stand, sit or lean on the product.
12. If there is a loose fit between the plug and the socket or the plug becomes very hot, the socket may need to be replaced. Check with a qualified electrician to replace the socket.
13. Disconnect power or unplug before cleaning, performing any maintenance or replacing a filter. Always unplug the appliance when not in use.
14. This appliance contains a Class 1 laser. Unintended use of the appliance or damage to the housing may result in the escape of dangerous laser radiation. Do not stare at the light source. Laser radiation may, even in little doses, cause harm to the eyes and skin. Do not attempt to modify or disassemble the laser tube.
15. If the supply cable is damaged, it must be replaced or repaired by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
16. Chemical Burn and Choking Hazard. Keep batteries away from children. This product contains a lithium button/coin cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours. Always completely secure the battery compartment. If the battery compartment does

not close securely, stop using the product, remove the batteries, and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

# READ AND SAVE THESE INSTRUCTIONS

## Additional information

### Control without the remote

- Your machine can be controlled through the MyDyson™ app.

### Maintaining your machine

- To always get the best performance from your machine, it's important to regularly clean it and check for blockages.

### Cleaning your machine

- If dust accumulates on the surface of your machine, wipe the shrouds and other parts with a clean, dry cloth only.
- Look for blockages in the air inlet holes on the shroud.
- Use a soft brush to remove dust and debris.
- Don't use detergents or polishes to clean your machine.

### Replaceable parts

- Your machine has replaceable filter units and batteries, any other servicing must be carried out by an authorised service representative.

### Battery replacement



#### Caution

- Unscrew the battery compartment on the remote control. Loosen the base and pull to remove the battery.
- Do not install backwards or short circuit the batteries.
- Do not attempt to dismantle or charge the batteries. Keep away from fire.
- Follow battery manufacturers' instructions when installing new batteries (battery type CR 2032).
- Always replace the screw in the remote control and refer to the battery hazard in the warning section.

### Non-washable filter units

- Your filter units are non-washable and non-recyclable.
- Failure to replace your filter units when prompted may result in changes to product performance and appearance.
- Replacement filter units can be purchased at [www.sa.dyson.com/support](http://www.sa.dyson.com/support) (SA) or [www.dyson.ae/support](http://www.dyson.ae/support) (UAE) or via the MyDyson™ app.

### Auto mode

- A period of six days is required after your machine is first used for the sensor to calibrate. During this period, your machine may be more sensitive to VOCs (such as odours) than normal.
- During first use, whilst the sensors calibrate, your machine can take up to two minutes to show VOC and NO<sub>2</sub> data.

### Wi-Fi connectivity

Wi-Fi is on by default. To turn the Wi-Fi on or off, press and hold the Standby on/off button on your machine for five seconds.

### MyDyson™ app connectivity

- You must have a live internet connection in order for the MyDyson™ app to work.
- Your machine can connect to either 2.4GHz or 5GHz networks which includes most modern routers. Check your router documentation for compatibility.
- Dyson endeavours to ensure that our technology is compatible with current operating systems, but this is not guaranteed. If you have any questions or would like to check the latest compatibility, please contact the Dyson Helpline.
- Your mobile device must have Bluetooth® wireless technology 4.0 support (Bluetooth Low Energy) in order to set up a connection with your machine. Check your device specification for compatibility.
- BLE/Wi-Fi 2.4GHz, 0.1W max

- Wi-Fi 5GHz, 0.2W max
- Networked standby: 2.0W

#### Conformity information

Hereby, Dyson declares that this environmental control radio equipment is in compliance with Directive 2014/53/EU.

The full text of the EU Declaration of Conformity is available at the following internet address:

[www.dyson.co.uk/inside-dyson/terms/compliance](http://www.dyson.co.uk/inside-dyson/terms/compliance) or [www.dyson.ie/inside-dyson/terms/compliance](http://www.dyson.ie/inside-dyson/terms/compliance).

#### Disposal information

- Dyson products are made from high grade recyclable materials. Recycle where possible.
- Dispose of or recycle the battery in accordance with local ordinances or regulations.
- Keep the used batteries away from children as these can still harm children if swallowed.
- Your filter units are non-washable and non-recyclable.
- Dispose of the exhausted filter unit(s) in accordance with local ordinances or regulations.
- The battery should be removed from the machine before disposal.

#### Limited 2-year guarantee

#### Terms and conditions of the Dyson 2-year limited guarantee

##### What is covered

- The repair or replacement of your Dyson appliance (at Dyson's discretion) if it is found to be defective due to faulty materials, workmanship or function within 2 years of purchase or delivery (if any part is no longer available or out of manufacture Dyson will replace it with a functional replacement part).
- Where this machine is sold outside of the EU, this warranty will only be valid if the appliance is used in the country in which it was sold.

##### What is not covered

- Replacement filter units. The appliance's filter units are not covered by the guarantee.

Dyson does not guarantee the repair or replacement of a product where a defect is the result of:

- Damage caused by not carrying out the recommended appliance maintenance.
- Accidental damage, faults caused by negligent use or care, misuse, neglect, careless operation or handling of the appliance which is not in accordance with the Dyson User Manual.
- Use of the appliance for anything other than normal domestic household purposes.
- Use of parts not assembled or installed in accordance with the instructions of Dyson.
- Use of parts and accessories which are not genuine Dyson components.
- Faulty installation (except where installed by Dyson).
- Repairs or alterations carried out by parties other than Dyson or its authorised agents.
- Blockages – Please refer to the 'Looking after your machine' section and illustrations in this Dyson Operating Manual for details of how to look for and clear blockages.
- Normal wear and tear (e.g. fuse etc.).
- Reduction in battery discharge time due to battery age or use (where applicable).

If you are in any doubt as to what is covered by your guarantee, please contact the Dyson Helpline.

##### Summary of cover

- The guarantee becomes effective from the date of purchase (or the date of delivery if this is later).
- You must provide proof of (both the original and any subsequent) delivery/purchase before any work can be carried out on your Dyson machine. Without this proof, any work carried out will be chargeable. Keep your receipt or delivery note.
- All work will be carried out by Dyson or its authorised agents.
- Any parts which are replaced by Dyson will become the property of Dyson.
- The repair or replacement of your Dyson machine under guarantee will not extend the period of guarantee.
- The guarantee provides benefits which are additional to and do not affect your statutory rights as a consumer.

#### Important data protection information

You will need to provide us with basic contact information when you register your Dyson machine or the MyDyson™ app.

When registering your Dyson machine:

- You will need to provide us with basic contact information to register your machine and enable us to support your guarantee.

When registering via the MyDyson™ app:

- You will need to provide us with basic contact information to register the MyDyson™ app. This enables us to securely link your machine to your instance of the app.
- When you register, you will have the opportunity to choose whether you would like to receive communications from us. If you opt-in to communications from Dyson, we will send you details of special offers and news of our latest innovations.
- We never sell your information to third parties and only use information that you share with us as defined by our privacy policies which are available on our website [privacy.dyson.com](http://privacy.dyson.com).

- يجب أن يدعم هاتفك المحمول تقنية Bluetooth® 4.0 اللاسلكية (البلوتوث منخفض الطاقة) من أجل إعداد الاتصال بالجهاز. راجع مواصفات جهازك للتحقق من التوافق.
- BLE/Wi-Fi 2.4GHz
- Wi-Fi 5GHz

#### معلومات التخلّص من الجهاز

- منتجات Dyson مصنوعة من مواد عالية الجودة قابلة لإعادة التدوير. لذلك عليك بإعادة تدويرها كلما كان ذلك ممكنًا.
- يتم التخلص من البطارية أو إعادة تدويرها وفقًا للقوانين أو اللوائح المحلية.
- احفظ البطاريات المستعملة بعيداً عن متناول الأطفال، حيث قد تتسبب في إلحاق الضرر بالأطفال في حال ابتلاعها.
- وحدات الفلاتر الخاصة بك غير قابلة للغسل وغير قابلة لإعادة التدوير.
- يتم التخلص من وحدات الفلاتر منتهية الصلاحية وفقًا للقوانين أو اللوائح المحلية.

#### ضمان محدود لمدة عامين

#### شروط وأحكام ضمان Dyson المحدود لمدة عامين

##### البنود المشمولة بالضمان

- يتم إصلاح جهاز Dyson أو استبداله (وفقًا لتقدير شركة Dyson) إذا تبين أن الجهاز معيب نتيجة وجود خلل في المواد أو المصنعية أو الوظائف خلال عامين من تاريخ الشراء أو التسليم (إذا لم يعد أي جزء متوفرًا أو لم يعد يتم تصنيعه، فنتلزم شركة Dyson باستبداله بقطع غيار سليمة).
- في حالة بيع هذا الجهاز خارج الاتحاد الأوروبي، سيكون هذا الضمان ساريًا إذا تم استخدام الجهاز في البلد الذي انبثق فيه.

##### البنود غير المشمولة بالضمان

- وحدات المرشح القابلة للاستبدال. إن وحدات مرشح الجهاز غير مشمولة بالضمان.
  - لا تضمن شركة Dyson إصلاح المنتج أو استبداله إذا كان العطل نتيجة لما يلي:
    - التلف الناتج عن عدم تنفيذ الصيانة الموصى بها للآلة.
    - التلف العرضي والأعطال الناجمة عن الاستخدام أو الرعاية المهملّة للجهاز أو إساءة استخدام الجهاز أو إهماله أو تشغيل الجهاز أو التعامل معه بإهمال مما يخالف دليل مستخدم Dyson.
    - استخدام الجهاز لأي شيء بخلاف الأغراض المنزلية العادية.
    - استخدام أجزاء لم يتم تجميعها أو تركيبها وفقًا لتعليمات Dyson.
    - استخدام أجزاء وملحقات ليست من المكونات الأصلية التابعة لشركة Dyson.
    - التركيب الخاطئ لمكونات الجهاز (إلا إذا تم تركيبه بواسطة Dyson).
    - تنفيذ الإصلاحات والتبديلات بواسطة أطراف أخرى غير Dyson أو أي من وكلائها المعتمدين.
  - يرجى الرجوع إلى قسم "العناية والصيانة" والرسوم التوضيحية في دليل التشغيل من دايسون للحصول على تفاصيل كيفية البحث عن الإسدادات وإزالتها.
  - البلى والتقدم المعتاد (مثل قاطع التيار وما إلى ذلك).
  - انخفاض في وقت تفريغ البطارية بسبب عمر البطارية أو استخدامها (حيثما ينطبق).
- إذا كانت لديك أي شكوك حول ما يغطيه الضمان، يُرجى الاتصال بخط المساعدة التابع لشركة Dyson.

##### ملخص تغطية الضمان

- يصبح الضمان ساريًا من تاريخ الشراء (أو تاريخ التسليم إذا كان هذا التاريخ لاحقًا).
- يجب عليك تقديم ما يثبت (سواء الجهاز الأصلي أو أي من ملحقاته التي اشتريتها بعد ذلك) عملية التسليم/الشراء قبل تنفيذ أي أعمال على جهاز Dyson. وبدون هذا الإثبات، ستتحمل دفع نفقات أي أعمال يتم إجراؤها. ويجب عليك الاحتفاظ بقسيمة الشراء أو إشعار التسليم.
- سيتم تنفيذ كافة الأعمال بمعرفة شركة Dyson أو أي من وكلائها المعتمدين.
- أي أجزاء يتم استبدالها بمعرفة Dyson تصبح ملك لشركة Dyson.
- إن إصلاح جهاز Dyson أو استبداله وهو لا يزال في فترة الضمان لن يمد فترة الضمان.
- يوفر الضمان مزايا مضافة إلى المنتج ولا يؤثر في أي حقوق قانونية قد تتمتع بها كمستهلك.

##### معلومات مهمة حول حماية البيانات

- ستحتاج إلى تزويدنا بمعلومات الاتصال الأساسية عند تسجيل منتج Dyson الخاص بك أو تطبيق MyDyson™
- عند تسجيل منتج Dyson الخاص بك:
  - ستحتاج إلى تزويدنا بمعلومات الاتصال الأساسية لتسجيل منتجك وتمكيننا من دعم الضمان الخاص بك.
- عند التسجيل عبر تطبيق MyDyson™
  - ستحتاج إلى تزويدنا بمعلومات الاتصال الأساسية لتسجيل تطبيق MyDyson™؛ هذا يمكننا من ربط منتجك بأمان بمثيل التطبيق لديك
  - عند التسجيل، سيكون لديك الفرصة لاختيار تلقي رسائل منا أم لا. إذا وافقت على تلقي رسائل من Dyson، فسنرسل لك تفاصيل العروض الخاصة والأخبار المتعلقة بأحدث الابتكارات لدينا.
  - نحن لا نبيع مطلقًا معلوماتك إلى جهات أخرى كما أننا نستخدم المعلومات فقط التي تشاركها معنا على النحو الذي تحدده سياسات الخصوصية لدينا المتوفرة على موقع الويب الخاص بنا [privacy.dyson.com](http://privacy.dyson.com)

أقل من ساعتين. احرصي دائماً على إحكام غلق حجرة البطارية. إذا لم يتم غلق حجرة البطارية بإحكام، توقف عن استخدام المنتج وقم بإزالة البطاريات واحفظها بعيداً عن متناول الأطفال. إذا كنت تشك في ابتلاع البطاريات أو دخولها في أي جزء من أجزاء الجسم، فاستشيري الطبيب على الفور.

## يجب قراءة هذه الإرشادات والاحتفاظ بها

### معلومات إضافية

- التحكم دون استخدام وحدة التحكم عن بُعد
- يمكن التحكم في جهازك من خلال تطبيق MyDyson™.

### صيانة جهازك

- للحصول دائماً على أفضل أداء من جهازك، فإنه من المهم تنظيفه بانتظام والتحقق من عدم وجود انسدادات.

### تنظيف جهازك

- إذا تراكم الغبار على سطح جهازك، فامسح الغبار عن الأغطية، والأجزاء الأخرى باستخدام قطعة قماش نظيفة وجافة فقط.
- ابحث عن الانسدادات في فتحات دخول الهواء الموجودة في الأغطية.
- استخدمي فرشاة ناعمة لإزالة الغبار والرواسب.
- لا تستخدم المواد المنظفة أو الملمعة لتنظيف الجهاز.

### الأجزاء القابلة للاستبدال

- يحتوي جهازك على وحدات ومرشح وبطاريات قابلة للاستبدال، ويجب إجراء أي صيانة أخرى بواسطة فممثل خدمة معتمد.

### استبدال البطارية



### تنبيه

- قم بفك حجرة بطارية وحدة التحكم عن بُعد، ثم فك القاعدة واسحب لإخراج البطارية
- لا تدخل البطاريات بشكل عكسي ولا تقم بتشغيل البطاريات على دائرة كهربائية قصيرة.
- لا تحاول فك البطاريات أو شحنتها، واحرص على إبعادها عن النيران.
- اتبع إرشادات الشركة المصنعة للبطارية عند تركيب بطاريات جديدة (نوع البطارية CR 2032).
- استبدل دائماً البرغي في وحدة التحكم عن بُعد وراجع مخاطر البطارية في قسم التحذير.

### وحدات المرشح غير القابلة للغسل

- وحدات الفلاتر الخاصة بك غير قابلة للغسل وغير قابلة لإعادة التدوير.
- قد ينتج عن عدم استبدال وحدات المرشح الخاصة بك عند المطالبة بذلك حدوث تغيرات في أداء الجهاز ومظهره.
- يمكن شراء وحدات المرشح البديلة من [www.sa.dyson.com/support](http://www.sa.dyson.com/support) (بالنسبة للمملكة العربية السعودية) أو [www.dyson.ae/support](http://www.dyson.ae/support) (بالنسبة للإمارات العربية المتحدة). أو عن طريق تطبيق MyDyson™.

### الوضع التلقائي

- تتطلب معايرة المستشعر فترة قدرها 6 أيام بعد استخدام الجهاز لأول مرة. أثناء هذه الفترة، قد يكون جهازك أكثر حساسية للمركبات العضوية المتطايرة (مثل الروائح).
- أثناء الاستخدام لأول مرة، أثناء معايرة المستشعرات، يمكن أن يستغرق جهازك ما يصل إلى دقيقتين لإظهار المركبات العضوية المتطايرة وبيانات ثاني أكسيد النيتروجين.

### اتصال Wi-Fi

- Wi-Fi قيد التشغيل بصورة افتراضية. لتشغيل/إيقاف تشغيل Wi-Fi، اضغط مع الاستمرار على الزر "تشغيل/إيقاف تشغيل وضع الاستعداد" في الجهاز لمدة خمس ثوانٍ.

### الاتصال بتطبيق MyDyson™

- يجب أن يكون لديك اتصال مباشر بالإنترنت حتى يعمل تطبيق MyDyson™
- يمكن ربط جهازك إما بشبكة 2.4 جيجاهرتز وإما 5 جيجاهرتز وهما بشملان معظم أجهزة التوجيه الحديثة. راجع وثائق جهاز التوجيه الخاص بك للتحقق من التوافق.
- تبدل شركة Dyson مقصاري جهدها لضمان توافق تقنيتنا مع أنظمة التشغيل الحالية ولكننا لا نضمن ذلك. إذا كانت لديك أي أسئلة أخرى، أو ترغب في مراجعة أحدث معلومات التوافق، فيرجى الاتصال بخط المساعدة التابع لشركة Dyson.

7. لا تستخدمى هذا الجهاز فى حال تلفه أو غمره بالماء.
8. هذا المنتج غير مُصمم لتحمل وزن الشخص وقد يتسبب فى حدوث إصابة. تجنّب الوقوف على المنتج، أو الجلوس أو الاتكاء عليه.
9. احتفظى بالجهاز والكابل بعيدًا عن الأسطح الساخنة. لا تضعى الكابل أسفل الأثاث أو الأجهزة.
10. لا تضع أى جسم فى أى فتحة إذ إن هذا قد يؤدي إلى حدوث صدمة كهربائية أو نشوب حريق أو تلف الجهاز.
11. احرص دائمًا على حمل هذا الجهاز من القاعدة.
12. إذا كان التركيب سائبًا بين القابس والمقبس أو إن أصبح القابس ساخنًا للغاية، فقد يحتاج المقبس إلى استبداله. تحققى بالاستعانة بكهربائى مؤهل لاستبدال المقبس.
13. افصل الطاقة أو انزع المقبس قبل التنظيف أو إجراء أى صيانة أو استبدال مرشح. احرص دائمًا على فصل الجهاز من الكهرباء عند عدم استخدامه.
14. يحتوى هذا الجهاز على ليزر من الفئة 1. قد يؤدي الاستخدام غير المقصود للجهاز أو تلف المبيت إلى تسرب إشعاع الليزر الخطير. لا تحقق فى مصدر الضوء. قد يؤدي إشعاع الليزر إلى الإضرار بالعينين والجلد، حتى إذا كان بجرعات قليلة. لا تحاول تعديل أنبوب الليزر أو فكّه.
15. إذا كان هناك تلف فى كابل الكهرباء، فيجب استبداله أو إصلاحه بمعرفة الشركة المصنّعة أو وكيل الصيانة التابع لها أو أى شخص يتمتع بدرجة مشابهة من التأهيل، لتجنب التعرض لأي خطر.
16. خطر التعرض لحرق كيميائى أو الاختناق. احرصى على إبعاد البطاريات عن تناول الأطفال. يحتوى هذا المنتج على بطارية ليثيوم خلوية دائرية الشكل. فى حال ابتلاع بطارية ليثيوم خلوية دائرية الشكل جديدة أو مستعملة أو دخولها إلى الجسم، فإنها قد تتسبب بحروق داخلية وقد تؤدي إلى الوفاة فى

## إرشادات هامة

## ⚠ تحذير

يحتوي الجهاز وأداة التحكم عن بُعد على مغناطيس.

1. قد تتأثر الأجهزة الطبية المزروعة مثل ناظمات القلب وأجهزة صدمات القلب الكهربائية بالمجالات المغناطيسية القوية. إذا كنت تستخدم أنت أو أحد أفراد أسرتك جهازًا طبيًا مزروعًا أو جهاز صدمات القلب الكهربائية، فتجنب وضع جهاز التحكم عن بُعد في جيبك أو بالقرب من الجهاز.
2. قد تتأثر أيضاً بطاقات الائتمان ووسائل التخزين الإلكترونية بالمواد المغناطيسية، ولذا ينبغي حفظها بعيداً عن وحدة التحكم عن بُعد وأعلى الجهاز.

لتجنب مخاطر الحريق أو الصدمة الكهربائية أو الإصابة:

3. هذا الجهاز غير مُخصص للاستخدام من جانب أشخاص (من بينهم الأطفال) من ذوي القدرات البدنية أو الحسية أو العقلية المحدودة، أو يفتقرون إلى الخبرة والمعرفة، ما لم يُقدم لهم الإشراف أو التوجيه بشأن استخدام الجهاز من جانب شخص مسؤول عن سلامتهم. ينبغي مراقبة الأطفال لضمان عدم عبثهم بالجهاز.
4. لا تستخدم الجهاز في الهواء الطلق أو على أسطح رطبة أو تلمسي أي جزء من الجهاز أو توصيله بالمقبس بأيدي مبتلة.
5. أبقِ الجهاز بعيدًا عن السوائل والأبخرة ومعطرات الهواء والزيوت العطرية القابلة للاشتعال.
6. قومي بتوصيله دائمًا بمقبس الحائط مباشرة. لا تستخدمه مع كابل تطويل، حيث إن زيادة التحميل قد تؤدي إلى زيادة سخونة الكابل واشتعاله.

