

Regulatory compliance and safety information
Thank you for choosing to buy a Dyson purifying fan heater

To read your safety instructions and guarantee terms and conditions in English, go to page 2.

To read your safety instructions and guarantee terms and conditions in ANZ, go to page 7.

To read your safety instructions and guarantee terms and conditions in India, go to page 12.

To read your safety instructions and guarantee terms and conditions in FEAST, go to page 17.

法規及安全資訊

感謝您選購戴森涼暖空氣清淨機

請翻閱第22頁，閱讀繁體中文版安全說明及保固條件。

규정 준수 및 안전 정보

다이슨 공기청정기(온풍기 겸용)를 구입해

주셔서 감사합니다

안전 지침 및 보증 약관을 읽으려면 28페이지로

이동하시기 바랍니다.

Informasi kepatuhan peraturan

dan keselamatan

Terima kasih telah memilih kipas

penjernih Dyson

Untuk petunjuk keselamatan beserta syarat dan ketentuan garansi dalam Bahasa Indonesia, anda dapat membacanya pada halaman 32.

การปฏิบัติตามกฎระเบียบและข้อมูลด้านความปลอดภัย
ขอขอบคุณที่เลือกซื้อเครื่องทำความร้อนด้วยพัดลมกรอง
อากาศDyson

หากต้องการอ่านคำแนะนำด้านความปลอดภัยรวมถึงข้อตกลง และเงื่อนไขในการรับประกันซึ่งเป็นภาษาไทย โปรดไปที่ หน้า 38.

Tuân thủ quy định và thông tin an toàn

Cảm ơn bạn đã lựa chọn mua sản phẩm quạt
sử lý lọc không khí Dyson

Để đọc các hướng dẫn an toàn và các điều khoản bảo hành bằng tiếng Việt, vui lòng đến trang 42.

الامتثال التنظيمي ومعلومات السلامة

شكراً لك لاختيار شراء المدفأة المزودة بمروحة تنقية

الهواء من Dyson

للاطلاع على تعليمات السلامة وشروط الضمان باللغة

العربية، يرجى الانتقال إلى الصفحة 56.

To read your safety instructions and guarantee terms and conditions in UAE, please go to page 47.

This product is only suitable for well insulated spaces or occasional use.

EN IMPORTANT SAFETY INSTRUCTIONS

WARNING

THE APPLIANCE AND THE REMOTE CONTROL BOTH CONTAIN MAGNETS.

1. Implanted medical devices such as pacemakers and defibrillators may be affected by strong magnetic fields. If you or someone in your household has an implanted medical device or defibrillator, avoid placing the remote control in a pocket or near to the device.
2. Credit cards and electronic storage media may also be affected by magnets and should be kept away from the remote control and the top of the appliance.

TO REDUCE THE RISK OF FIRE,
ELECTRIC SHOCK, OR INJURY:

3. Some parts of this appliance can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
4. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or reasoning capabilities, or lack of experience and knowledge, only if they have been given supervision or instruction by a responsible person concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance

shall not be made by children without supervision.

5. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
6. Children of less than 3 years should be kept away unless continuously supervised.
7. This appliance must not be located immediately below a socket outlet.
8. Do not use or store this appliance in the immediate surroundings of a bath, shower or swimming pool.
9. Do not use this appliance if it has been dropped or if it has visible signs of damage.
10. Always use this appliance on a horizontal and stable surface.
11. To avoid overheating, do not cover the appliance. 
12. If the supply cable is damaged, it must be replaced or repaired by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
13. Do not use outdoors or on wet surfaces and do not handle any part of the appliance or plug with wet hands.
14. Keep the appliance away from flammable liquids, vapours, air fresheners and essential oils.
15. Always plug directly into a wall socket. Never use with an extension cable as overloading may result

- in the cable overheating and catching fire.
16. Do not use this appliance if it has been damaged or submerged in water.
 17. Keep this appliance and cable away from heated surfaces. Do not position the cable under furniture or appliances.
 18. Do not put any objects into any openings as this may cause an electric shock or fire or damage the appliance.
 19. Always carry this appliance by the base and not by the loop amplifier.
 20. If there is a loose fit between the plug and the socket or the plug becomes very hot, the socket may need to be replaced. Check with a qualified electrician to replace the socket.
 21. Do not use this appliance in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
 22. To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 metre from the air outlet.
 23. Disconnect power or unplug before cleaning, performing any maintenance or replacing a filter. Always unplug the appliance when not in use.
 24. This is Class 1 consumer Laser product compliant to EN 50689:2012 . Unintended use of the appliance or damage to the housing may result in the escape of dangerous laser radiation. Do not stare the light source. Do not attempt to modify or disassemble the Laser Tube.

25. **WARNING.** Chemical Burn and Choking Hazard. Keep batteries away from Children (whether the battery is new or used). This product contains a lithium button/ coin cell battery. If a new or used lithium button/ coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours or less. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep it away from children. If you think a battery might have been swallowed or placed inside any part of the body, seek immediate medical attention. The button/ coin battery is located inside the remote control.

READ AND SAVE THESE INSTRUCTIONS

Additional information

Maintaining your machine

- To always get the best performance from your machine, it's important to regularly clean it and check for blockages.

Cleaning your machine

- If dust accumulates on the surface of your machine, wipe dust from the loop amplifier, shrouds and other parts with a clean, dry cloth only.
- Look for blockages in the air inlet holes on the shroud and the small aperture inside the loop amplifier.
- Use a soft brush to remove dust and debris.
- Don't use detergents or polishes to clean your machine.

Replaceable parts

- Your machine has replaceable filter units and batteries, any other servicing must be carried out by an authorised service representative.

Battery replacement



Caution

- Unscrew the battery compartment on the remote control. Loosen the base and pull to remove the battery.
- Do not install backwards or short circuit the batteries.
- Do not attempt to dismantle or charge the batteries. Keep away from fire.
- Follow battery manufacturers' instructions when installing new batteries (battery type CR 2032).
- Always replace the screw in the remote control and refer to the battery hazard in the warning section.

Non-washable filter units

- Your filter units are non-washable and non-recyclable.
- Failure to replace your filter units when prompted may result in changes to product performance and appearance.
- Replacement filter units can be purchased at www.dyson.com or via the MyDyson™ app.

Automatic cut-out

- For your safety, your machine is fitted with automatic cut-out switches that operate if the machine tips over or overheats. If the switches operate, unplug your machine and allow it to cool. Before restarting your machine, check and clear any blockages and ensure that your machine is on a solid level surface.
- In heating mode, your machine will automatically switch off after nine hours of continuous use. To restart your machine, press the Standby on/off button on either the remote control or the base.

Disposal information

- Dyson products are made from high grade recyclable materials. Recycle where possible.
 - Dispose of or recycle the battery in accordance with local ordinances or regulations.
-  This symbol indicates that this machine should not be disposed with your general household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. When this machine has reached the end of its serviceable life, please take it to a recognised WEEE (Waste Electrical and Electronic Equipment) collection facility such as your local civic amenity site for recycling. Your local authority or retailer will be able to advise you of your nearest recycling facility.
- Keep the used batteries away from children as these can still harm children if swallowed.
 - Your filter units are non-washable and non-recyclable.
 - Dispose of the exhausted filter unit(s) in accordance with local ordinances or regulations.
 - The battery should be removed from the machine before disposal.

Limited 2-year guarantee

Terms and conditions of the Dyson 2-year limited guarantee are set out below. The name, address details of the Dyson guarantor for your country are set out in this document – please refer to the table on the back page for full details.

What is covered

- The repair or replacement of your Dyson machine (at Dyson's discretion) if it is found to be defective due to faulty materials, workmanship or function within two years of purchase or delivery (if any part is no longer available or out of manufacture, Dyson will replace it with a functional replacement part).

What is not covered

- Replacement filter units. The machine's filter units are not covered by the guarantee.

Dyson does not guarantee the repair or replacement of a product where a defect is the result of:

- Damage caused by not carrying out the recommended machine maintenance.
- Accidental damage, faults caused by negligent use or care, misuse, neglect, carelessness or operation or handling of the machine which is not in accordance with the Dyson User manual.
- Use of the machine for anything other than normal domestic household purposes.
- Use of parts not assembled or installed in accordance with the instructions of Dyson.
- Use of parts and accessories which are not genuine Dyson components.
- Faulty installation (except where installed by Dyson).
- Repairs or alterations carried out by parties other than Dyson or its authorised agents.
- Blockages – Refer to the Dyson User manual for details on how to look for and clear blockages.
- Normal wear and tear (e.g. fuse etc.).
- Reduction in battery discharge time due to battery age or use (where applicable).

If you are in any doubt as to what is covered by your guarantee, please contact the Dyson Helpline.

Summary of cover

- The guarantee becomes effective from the date of purchase (or the date of delivery if this is later).
- You must provide proof of (both the original and any subsequent) delivery/purchase before any work can be carried out on your Dyson machine. Without this proof, any work carried out will be chargeable. Keep your receipt or delivery note.
- All work will be carried out by Dyson or its authorised agents.
- Any parts which are replaced by Dyson will become the property of Dyson.
- The repair or replacement of your Dyson machine under guarantee will not extend the period of guarantee unless this is required by local law in the country of purchase.
- The guarantee provides benefits which are additional to and do not affect your statutory rights as a consumer and will apply whether you purchased your product directly from Dyson or from a third party.

Important data protection information

You will need to provide us with basic contact information when you register your Dyson machine or via the MyDyson™ app.

When registering your Dyson machine:

- You will need to provide us with basic contact information to register your machine and enable us to support your guarantee.

When registering via the MyDyson™ app:

- You will need to provide us with basic contact information to register the MyDyson™ app. This enables us to securely link your machine to your instance of the app.
- When you register, you will have the opportunity to choose whether you would like to receive communications from us. If you opt-in to communications from Dyson, we will send you details of special offers and news of our latest innovations.
- We never sell your information to third parties and only use information that you share with us as defined by our privacy policies which are available on our website at [privacy.dyson.com](https://www.dyson.com/privacy).

ANZ IMPORTANT SAFETY INSTRUCTIONS

WARNING

TO REDUCE THE RISK OF FIRE,
ELECTRIC SHOCK, OR INJURY:

1. Some parts of this appliance can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
2. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
3. Children aged from 3 years and less than 8 years shall only switch 'ON/OFF' the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children aged

from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

4. Children of less than 3 years should be kept away unless continuously supervised.
5. This appliance must not be located immediately below a socket outlet.
6. Do not use or store this appliance in the immediate surroundings of a bath, shower or swimming pool.
7. Do not use this appliance if it has been dropped or if it has visible signs of damage.
8. Always use this appliance on a horizontal and stable surface.
9. To avoid overheating, do not cover the appliance. 
10. If the supply cable is damaged, it must be replaced or repaired by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
11. Do not use outdoors or on wet surfaces and do not handle any part of the appliance or plug with wet hands.
12. Keep the appliance away from flammable liquids, vapours, air fresheners and essential oils.
13. Always plug directly into a wall socket. Never use with an extension cable as overloading may result in the cable overheating and catching fire.
14. Do not use this appliance if it has been damaged or submerged in water.
15. Keep this appliance and cable away from heated surfaces. Do not position the cable under furniture or appliances.
16. Do not put any objects into any openings as this may cause an electric shock or fire or damage the appliance.

17. Always carry this appliance by the base and not by the loop amplifier.
18. If there is a loose fit between the plug and the socket or the plug becomes very hot, the socket may need to be replaced. Check with a qualified electrician to replace the socket.
19. Do not use this appliance in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
20. To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 metre from the air outlet.
21. Disconnect power or unplug before cleaning, performing any maintenance or replacing a filter. Always unplug the appliance when not in use.
22. This appliance contains a Class 1 laser. Unintended use of the appliance or damage to the housing may result in the escape of dangerous laser radiation. Do not stare at the light source. Laser radiation may, even in little doses, cause harm to the eyes and skin. Do not attempt to modify or disassemble the laser tube.
23. **WARNING. Chemical Burn and Choking Hazard.** Keep batteries away from Children (whether the battery is new or used). This product contains a lithium button/coin cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours or less. Always completely secure the battery compartment. If the battery



compartment does not close securely, stop using the product, remove the batteries, and keep it away from children. If you think a battery might have been swallowed or placed inside any part of the body, seek immediate medical attention. The button/coin battery is located inside the remote control.

READ AND SAVE THESE INSTRUCTIONS

Additional information

Maintaining your machine

- To always get the best performance from your machine, it's important to regularly clean it and check for blockages.

Cleaning your machine

- If dust accumulates on the surface of your machine, wipe dust from the loop amplifier, shrouds and other parts with a clean, dry cloth only.
- Look for blockages in the air inlet holes on the shroud and the small aperture inside the loop amplifier.
- Use a soft brush to remove dust and debris.
- Don't use detergents or polishes to clean your machine.

Replaceable parts

- Your machine has replaceable filter units and batteries, any other servicing must be carried out by an authorised service representative.

Battery replacement



CAUTION

- Unscrew the battery compartment on the remote control. Loosen the base and pull to remove the battery.
- Do not install backwards or short circuit the batteries.
- Do not attempt to dismantle or charge the batteries. Keep away from fire.
- Follow battery manufacturers' instructions when installing new batteries (battery type CR 2032).
- Always replace the screw in the remote control and refer to the battery hazard in the warning section.

Non-washable filter units

- Your filter units are non-washable and non-recyclable.
- Failure to replace your filter units when prompted may result in changes to product performance and appearance.
- Replacement filter units can be purchased at www.dyson.com.au/support (AU) or www.dyson.co.nz/support (NZ) or via the MyDyson™ app.

Automatic cut-out

- For your safety, your machine is fitted with automatic cut-out switches that operate if the machine tips over or overheats. If the switches operate, unplug your machine and allow it to cool. Before restarting your machine, check and clear any blockages and ensure that your machine is on a solid level surface.
- In heating mode, your machine will automatically switch off after nine hours of continuous use. To restart your machine, press the Standby on/off button on either the remote control or the base.

Disposal information

Dyson products are made from high-grade recyclable materials. Please dispose of this product responsibly and recycle where possible. When your Dyson machine reaches the end of its life, we can assist with its safe disposal. You can send your old Dyson machine back to us (at our cost) and we will organise for it to be recycled.*

*Please note that not all parts are recyclable. Recycling of parts is subject to the capabilities of third party suppliers.

Simply:

1. Please contact the Dyson Helpline on 1800 239 766 (Australia) or 0800 397 667 (New Zealand).

2. Provide the serial number of your old Dyson machine.
3. Dyson Helpline staff will arrange a reply-paid shipping label to be emailed.
4. Box up your old Dyson machine.
5. Print and attach the provided reply-paid shipping label on the external of the box.
6. Write "Dyson We Recycle" on the external of the box.
7. Take the package to your local post office to send the machine back to us.
 - Keep the used batteries away from children as these can still harm children if swallowed.
 - Your filter units are non-washable and non-recyclable.
 - Dispose of the exhausted filter unit(s) in accordance with local ordinances or regulations.
 - The battery should be removed from the machine before disposal.

Australian Consumer law

In Australia, your Dyson machine comes with guarantees that cannot be excluded under the Australian Consumer Law. You are entitled to a replacement or refund for a major failure and for compensation for any other reasonably foreseeable loss or damage. You are also entitled to have your Dyson machine repaired or replaced if it fails to be of acceptable quality and the failure does not amount to a major failure. All rights under the Dyson guarantee are in addition to your rights under the Australian Consumer Law. You can find more information about your rights by visiting the ACCC's website.

New Zealand Consumer Law

Under the New Zealand Consumer Guarantees Act 1993, if the product is not of acceptable quality but that defect is not substantial, Dyson may choose whether to repair or replace the product. If a repair will be difficult, Dyson may instead provide you with a refund. If a product's defect is substantial or cannot be fixed, you can ask for either a refund, replacement product, or compensation for any reduction in that product's value. You are also entitled to compensation for any other reasonably foreseeable loss caused by that substantial defect.

Dyson 2-year guarantee

Terms and conditions of the Dyson 2-year guarantee

What is covered

- The repair or replacement of your Dyson machine (at Dyson's discretion) if it is found to be defective due to faulty materials, workmanship or function within two years of purchase (if any part is no longer available or out of manufacture, Dyson will replace it with a functional replacement part).
- This Dyson guarantee will only be valid if the machine is used in the country in which it was sold.

What is not covered

- Replacement filter units. The machine's filter units are not covered by the guarantee.

Under your Dyson guarantee, Dyson shall not be liable for costs of repair or replacement of a product incurred as a result of:

- Damage caused by not carrying out the recommended machine maintenance.
- Accidental damage, faults caused by negligent use or care, misuse, neglect, careless operation or handling of the Dyson machine which is not in accordance with your Dyson User manual.
- Use of the Dyson machine for anything other than normal domestic purposes in the country of purchase.
- Use of parts not assembled or installed in accordance with the instructions of Dyson.
- Use of parts and accessories other than those produced or recommended by Dyson.
- Faulty installation (except where installed by Dyson).
- Repairs or alterations carried out by parties other than Dyson or its authorised agents.
- Blockages – Refer to the Dyson User manual for details on how to look for and clear blockages.
- Normal wear and tear (e.g. fuse etc.).
- Reduction in battery discharge time due to battery age or use (cordless machines only).
- Whether or not the Dyson guarantee applies, you may have rights and remedies available to you under Australian or New Zealand Consumer Law.

Other terms relating to the Dyson guarantee

- The Dyson guarantee becomes effective from the date of purchase.
- All work will be carried out by Dyson Appliances (Aust.) Pty Limited, Dyson New Zealand Limited (NZ) or their authorised agents.
- Any parts replaced by Dyson or its service agents will become the property of Dyson Appliances (Aust.) Pty Limited or Dyson New Zealand Limited (NZ).
- You must provide proof of purchase for your Dyson machine in order to make a claim under the Dyson guarantee.
- Under the Dyson guarantee, the repair, replacement and any associated delivery charges (both to and from Dyson) will be at no cost to you.
- Whether or not the Dyson guarantee applies, you may have rights and remedies available to you under Australian or New Zealand Consumer Law.

Important data protection information

You will need to provide us with basic contact information when you register your Dyson machine or via the MyDyson™ app.

When registering your Dyson machine:

- You will need to provide us with basic contact information to register your machine and enable us to support your Dyson guarantee.

When registering via the MyDyson™ app:

- You will need to provide us with basic contact information to register the MyDyson™ app. This enables us to securely link your machine to your instance of the app.
- When you register, you will have the opportunity to choose whether you would like to receive communications from us. If you opt-in to communications from Dyson, we will send you details of special offers and news of our latest innovations.
- We never sell your information to third parties and only use information that you share with us as defined by our privacy policies which are available on our website [privacy.dyson.com](https://www.dyson.com/privacy).

IN IMPORTANT SAFETY INSTRUCTIONS

WARNING

THE APPLIANCE AND THE REMOTE CONTROL BOTH CONTAIN MAGNETS.

1. Implanted medical devices such as pacemakers, and defibrillators may be affected by strong magnetic fields. If you or someone in your household has an implanted medical device or defibrillator, avoid placing the remote control in a pocket or near to the device.
2. Credit cards and electronic storage media may also be affected by magnets and should be kept away from the remote control and the top of the appliance.

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

3. Some parts of this appliance can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless

they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

5. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
6. Children of less than 3 years should be kept away unless continuously supervised.
7. This appliance must not be located immediately below a socket outlet.
8. Do not use or store this appliance in the immediate surroundings of a bath, shower or swimming pool.
9. Do not use this appliance if it has been dropped or if it has visible signs of damage.
10. Always use this appliance on a horizontal and stable surface.
11. To avoid overheating, do not cover the appliance. 
12. If the supply cable is damaged, it must be replaced or repaired by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
13. Do not use outdoors or on wet surfaces and do not handle any part of the appliance or plug with wet hands.
14. Keep the appliance away from flammable liquids, vapours, air fresheners and essential oils.

15. Always plug directly into a wall socket. Never use with an extension cable as overloading may result in the cable overheating and catching fire.
16. Do not use this appliance if it has been damaged or submerged in water.
17. Keep this appliance and cable away from heated surfaces. Do not position the cable under furniture or appliances.
18. Do not put any objects into any openings as this may cause an electric shock or fire or damage the appliance.
19. Always carry this appliance by the base and not by the loop amplifier.
20. If there is a loose fit between the plug and the socket or the plug becomes very hot, the socket may need to be replaced. Check with a qualified electrician to replace the socket.
21. Do not use this appliance in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
22. To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 metre from the air outlet.
23. Disconnect power or unplug before cleaning, performing any maintenance or replacing a filter. Always unplug the appliance when not in use.
24. This appliance contains a Class 1 laser. Unintended use of the appliance or damage to the housing may result in the escape of dangerous laser radiation. Do not stare at the light source. Laser radiation may, even in little doses, cause harm to the eyes and

skin. Do not attempt to modify or disassemble the laser tube.

25. Chemical Burn and Choking

Hazard. Keep batteries away from children. This product contains a lithium button/coin cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

READ AND SAVE THESE INSTRUCTIONS

Additional information

Maintaining your machine

- To always get the best performance from your machine, it's important to regularly clean it and check for blockages.

Cleaning your machine

- If dust accumulates on the surface of your machine, wipe dust from the loop amplifier, shrouds and other parts with a clean, dry cloth only.
- Look for blockages in the air inlet holes on the shroud and the small aperture inside the loop amplifier.
- Use a soft brush to remove dust and debris.
- Don't use detergents or polishes to clean your machine.

Replaceable parts

- Your machine has replaceable filter units and batteries, any other servicing must be carried out by an authorised service representative.

Battery replacement



Caution

- Unscrew the battery compartment on the remote control. Loosen the base and pull to remove the battery.
- Do not install backwards or short circuit the batteries.
- Do not attempt to dismantle or charge the batteries. Keep away from fire.
- Follow battery manufacturers' instructions when installing new batteries (battery type CR 2032).
- Always replace the screw in the remote control and refer to the battery hazard in the warning section.

Non-washable filter units

- Your filter units are non-washable and non-recyclable.
- Failure to replace the filter units when prompted may result in changes to product performance and appearance.
- Replacement filter units can be purchased at www.dyson.in or via the MyDyson™ app.

Automatic cut-out

- For your safety, your machine is fitted with automatic cut-out switches that operate if the machine tips over or overheats. If the switches operate, unplug your machine and allow it to cool. Before restarting your machine, check and clear any blockages and ensure that your machine is on a solid level surface.
- In heating mode, your machine will automatically switch off after nine hours of continuous use. To restart your machine, press the Standby on/off button on either the remote control or the base.

Disposal information

- Dyson products are made from high grade recyclable materials. Recycle where possible.
- Dispose of or recycle the battery in accordance with local ordinances or regulations.
- The battery should be removed for separate recycling.
- Keep the used batteries away from children as these can still harm children if swallowed.
- Your filter units are non-washable and non-recyclable.
- Dispose of the exhausted filter unit(s) in accordance with local ordinances or regulations.
- The battery should be removed from the machine before disposal.

Limited 2-year warranty

Terms and conditions of the Dyson 2-year limited warranty.

What is covered

- The repair or replacement of your Dyson machine (at Dyson's discretion) if it is found to be defective due to faulty materials, workmanship or function within two years of purchase or delivery (if any part is no longer available or out of manufacture, Dyson will replace it with a functional replacement part).
- This warranty will only be valid if the machine is used in the country in which it was sold.

What is not covered

- Replacement filter units. The machine's filter units are not covered by the warranty.

Dyson does not guarantee the repair or replacement of a product where a defect is the result of:

- Damage caused by not carrying out the recommended machine maintenance.
- Accidental damage, faults caused by negligent use or care, misuse, neglect, carelessness or operation or handling of the machine which is not in accordance with the Dyson User manual.
- Use of the machine for anything other than normal domestic household purposes.
- Use of parts not assembled or installed in accordance with the instructions of Dyson.
- Use of parts and accessories which are not genuine Dyson components.
- Faulty installation (except where installed by Dyson).
- Repairs or alterations carried out by parties other than Dyson or its authorised agents.
- Blockages – Refer to the Dyson User manual for details on how to look for and clear blockages.
- Normal wear and tear (e.g. fuse etc.).
- Reduction in battery discharge time due to battery age or use (where applicable).

If you are in any doubt as to what is covered by your warranty, please contact the Dyson Helpline.

Summary of cover

- The warranty becomes effective from the date of purchase (or the date of delivery if this is later).
- You must provide proof of (both the original and any subsequent) delivery/purchase before any work can be carried out on your Dyson machine. Without this proof, any work carried out will be chargeable. Keep your receipt or delivery note.
- All work will be carried out by Dyson or its authorised agents.
- Any parts which are replaced by Dyson will become the property of Dyson.
- The repair or replacement of your Dyson machine under warranty will not extend the period of warranty.
- The warranty provides benefits which are additional to and do not affect your statutory rights as a consumer.

Important data protection information

You will need to provide us with basic contact information when you register your Dyson machine or the MyDyson™ app.

When registering your Dyson machine:

- You will need to provide us with basic contact information to register your machine and enable us to support your warranty.

When registering via the MyDyson™ app:

- You will need to provide us with basic contact information to register the MyDyson™ app. This enables us to securely link your machine to your instance of the app.
- When you register, you will have the opportunity to choose whether you would like to receive communications from us. If you opt-in to communications from Dyson, we will send you details of special offers and news of our latest innovations.
- We never sell your information to third parties and only use information that you share with us as defined by our privacy policies which are available on our website at [privacy.dyson.com](https://www.dyson.com/privacy).

ENFEAST IMPORTANT SAFETY INSTRUCTIONS

WARNING

THE APPLIANCE AND THE REMOTE CONTROL BOTH CONTAIN MAGNETS.

1. Implanted medical devices such as pacemakers and defibrillators may be affected by strong magnetic fields. If you or someone in your household has an implanted medical device or defibrillator, avoid placing the remote control in a pocket or near to the device.
2. Credit cards and electronic storage media may also be affected by magnets and should be kept away from the remote control and the top of the appliance.

TO REDUCE THE RISK OF FIRE,
ELECTRIC SHOCK, OR INJURY:

3. Some parts of this appliance can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

5. Children aged from 3 years and less than 8 years shall only switch 'ON/OFF' the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
6. Children of less than 3 years should be kept away unless continuously supervised.
7. This appliance must not be located immediately below a socket outlet.
8. Do not use this appliance in the immediate surroundings of a bath, a shower or a swimming pool.
9. Do not use this appliance if it has been dropped or if it has visible signs of damage.
10. Always use this appliance on a horizontal and stable surface.
11. To avoid overheating, do not cover the appliance. 
12. If the supply cable is damaged, it must be replaced or repaired by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
13. Do not use outdoors or on wet surfaces and do not handle any part of the appliance or plug with wet hands.
14. Keep the appliance away from flammable liquids, vapours, air fresheners and essential oils.
15. Always plug directly into a wall socket. Never use with an extension cable as overloading may result in the cable overheating and catching fire.

16. Do not use this appliance if it has been damaged or submerged in water.
17. Keep this appliance and cable away from heated surfaces. Do not position the cable under furniture or appliances.
18. Do not put any objects into any openings as this may cause an electric shock or fire or damage the appliance.
19. Always carry this appliance by the base and not by the loop amplifier.
20. If there is a loose fit between the plug and the socket or the plug becomes very hot, the socket may need to be replaced. Check with a qualified electrician to replace the socket.
21. Do not use this appliance in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
22. To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 metre from the air outlet.
23. Disconnect power or unplug before cleaning, performing any maintenance or replacing a filter. Always unplug the appliance when not in use.
24. This appliance contains a Class 1 laser. Unintended use of the appliance or damage to the housing may result in the escape of dangerous laser radiation. Do not stare at the light source. Laser radiation may, even in little doses, cause harm to the eyes and skin. Do not attempt to modify or disassemble the laser tube.
25. Chemical Burn and Choking Hazard. Keep batteries away from children. This appliance contains a

lithium button/coin cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the appliance, remove the batteries, and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

READ AND SAVE THESE INSTRUCTIONS

Additional information

Maintaining your machine

- To always get the best performance from your machine, it's important to regularly clean it and check for blockages.

Cleaning your machine

- If dust accumulates on the surface of your machine, wipe dust from the loop amplifier, shrouds and other parts with a clean, dry cloth only.
- Look for blockages in the air inlet holes on the shroud and the small aperture inside the loop amplifier.
- Use a soft brush to remove dust and debris.
- Don't use detergents or polishes to clean your machine.

Replaceable Parts

- Your machine has replaceable filter units and batteries, any other servicing must be carried out by an authorised service representative.

Battery replacement



Caution

- Unscrew the battery compartment on the remote control. Loosen the base and pull to remove the battery.
- Do not install backwards or short-circuit the batteries.
- Do not attempt to dismantle or charge the batteries. Keep away from fire.
- Follow the battery manufacturers' instructions when installing new batteries (battery type CR 2032).
- Always replace the screw in the remote control and refer to the battery hazard in the warning section.

Non-washable filter units

- Your filter units are non-washable and non-recyclable.
- Failure to replace your filter units when prompted may result in changes to product performance and appearance.
- Replacement filter units can be purchased at www.dyson.com or via the MyDyson™ app.

Automatic cut-out

- For your safety, your machine is fitted with automatic cut-out switches that operate if the machine tips over or overheats. If the switches operate, unplug your machine and allow it to cool. Before restarting your machine, check and clear any blockages and ensure that your machine is on a solid level surface.
- In heating mode, your machine will automatically switch off after nine hours of continuous use. To restart your machine, press the Standby on/off button on either the remote control or the base.

Disposal information

- Dyson products are made from high grade recyclable materials. Recycle where possible.
- Dispose of or recycle the battery in accordance with local ordinances or regulations.
- Keep the used batteries away from children as these can still harm children if swallowed.
- Your filter units are non-washable and non-recyclable.
- Dispose of the exhausted filter unit(s) in accordance with local ordinances or regulations.
- The battery should be removed from the machine before it is discarded. When removing the battery, the machine must be powered off. Safely dispose the battery in accordance with local ordinances or regulations.

Limited 2-year guarantee

Terms and conditions of the Dyson 2-year limited guarantee

What is covered

- The repair or replacement of your Dyson machine (at Dyson's discretion) if it is found to be defective due to faulty materials, workmanship or function within two years of purchase or delivery (if any part is no longer available or out of manufacture, Dyson will replace it with a functional replacement part).
- This guarantee will only be valid if the machine is used in the country in which it was sold.

What is not covered

- Replacement filter units. The machine's filter units are not covered by the guarantee.

Dyson does not guarantee the repair or replacement of a machine where a defect is the result of:

- Damage caused by not carrying out the recommended machine maintenance.
- Accidental damage, faults caused by negligent use or care, misuse, neglect, careless operation or handling of the machine which is not in accordance with the Dyson User manual.
- Use of the machine for anything other than normal domestic household purposes.
- Use of parts not assembled or installed in accordance with the instructions of Dyson.
- Use of parts and accessories which are not genuine Dyson components.
- Faulty installation (except where installed by Dyson).
- Repairs or alterations carried out by parties other than Dyson or its authorised agents.
- Blockages – Please refer to the 'Looking after your machine' section and illustrations in your Dyson User manual for details of how to look for and clear blockages.
- Normal wear and tear (e.g. fuse etc.).
- Reduction in battery discharge time due to battery age or use (where applicable).

If you are in any doubt as to what is covered by your guarantee, please contact Dyson.

Summary of cover

- The guarantee becomes effective from the date of purchase (or the date of delivery if this is later).
- You must provide proof of (both the original and any subsequent) purchase/delivery before any work can be carried out on your Dyson machine. Without this proof, any work carried out will be chargeable. Keep your receipt or delivery note.
- All work will be carried out by Dyson or its authorised agents.
- Any parts which are replaced by Dyson will become the property of Dyson.
- The repair or replacement of your Dyson machine under guarantee will not extend the period of guarantee.
- The guarantee provides benefits which are additional to and do not affect your statutory rights as a consumer.

Important data protection information

You will need to provide us with basic contact information when you register your Dyson machine or via the MyDyson™ app.

When registering your Dyson machine:

- You will need to provide us with basic contact information to register your machine and enable us to support your guarantee.

When registering via the MyDyson™ app:

- You will need to provide us with basic contact information to register the MyDyson™ app. This enables us to securely link your machine to your instance of the app.
- When you register, you will have the opportunity to choose whether you would like to receive communications from us. If you opt-in to communications from Dyson, we will send you details of special offers and news of our latest innovations.
- We never sell your information to third parties and only use information that you share with us as defined by our privacy policies which are available on our website at [privacy.dyson.com](https://www.dyson.com/privacy).

HK/TW

重要注意事項

警告

產品以及遙控器中都含有磁鐵。

1. 心臟節律器等植入性醫療裝置及除顫器可能受到強磁場影響。如您或您的家人安有心臟節律器或除顫器，請勿將遙控器放在口袋或接近心臟節律器或除顫器的地方。
2. 信用卡以及電子儲存媒體可能會受到磁鐵的影響，因此應避免放置在產品頂端附近。

為了降低起火燃燒、電擊或受傷的危險：

3. 本產品的某些零件可能會變得很熱並且造成燙傷。有兒童和老弱傷殘在場時，應該特別注意。
4. 本產品不適合行動不便、感官或心智障礙的人士使用，亦不適合缺乏相關經驗和知識者(包含兒童)，除非在專人指導或監督，確保安全無虞的情況下方能使用。兒童不得將本產品當作玩具，並且應始終得到監護。
5. 切勿將本產品放置於插座正下方。
6. 請勿在浴池、淋浴間或游泳池的附近使用或存放本產品。
7. 本產品若曾摔落或有可見損傷即不可使用。
8. 請始終在穩定的水平表面上使用本產品。
9. 為避免過熱，請勿蓋住本產品。
10. 如果電源線損壞，必須交由其製造商、其維修代理商或相關的合格人員更換或維修，以免發生危險。
11. 禁止戶外或潮濕表面使用，也不要濕手處理產品的任何部分或插頭。
12. 請將本產品遠離易燃液體、蒸氣、空氣清新劑和精油。
13. 請將插頭直接插入牆式插座。請勿使用延長線，因為超載可能會導致電線過熱並著火。



14. 本產品若受損或曾浸入水中即不可使用。
15. 不要將本產品或其電線靠近高熱表面。勿將電線置於家具或電器下方。
16. 請勿將任何物體放入出風口，因為這可能會造成電擊，起火或危害本產品。
17. 搬運本產品時請始終持握產品的底部，不要以拿住橢圓形出風框的方式搬運。
18. 如果插頭和插座之間沒插好，或是插頭變得非常熱，可能需要更換插座。應請合格的電工更換插座。
19. 除非提供持續性的監督，否則不可在無法自行離開房間者所處的小房間內使用本產品。
20. 為降低起火風險，請保持紡織品、窗簾或任何其他可燃物與出風口之間至少距離 1 公尺。
21. 清潔、執行任何保養或更換濾網之前，請先切斷電源。
22. 本產品包含1類雷射器。意外使用本產品或損壞外殼可能會導致危險的鐳射輻射逸出。請勿直視光源。即使很少的劑量，激光輻射也可能會導致眼睛和皮膚傷害。請勿嘗試修改或拆卸雷射管。
23. 化學灼傷及窒息危險。請將電池放置在兒童拿不到的地方。本產品包含鈕扣型/硬幣型鋰電池。如果新的或用過的鈕扣型/硬幣型鋰電池被誤吞或是進入身體，可能會造成嚴重的內部灼傷，並且可能最少在 2 小時內導致死亡。請確保電池盒蓋完全安全。如果未安全地關閉電池盒蓋，請停止使用本產品、移除電池，並且將它放置在兒童拿不到的地方。如果認為電池已被誤吞或是已放入身體的任何部位，請立即尋求醫療協助。

請仔細閱讀並妥善保管 指示說明

其他資訊

維護機器

- 為了始終使機器發揮最佳性能，必須定期清潔機器並檢查堵塞情況。

清潔機器

- 如果灰塵積聚在機器表面，請僅用乾淨的乾布擦拭出風口機身、護罩和其他部件上的灰塵。
- 尋找護罩上的進氣孔和出風口內小孔的堵塞。
- 使用軟刷來去除灰塵和碎屑。
- 勿使用清潔劑或亮光劑來清潔您的機器。

可替換零件

- 您的機器具有可更換的濾網和電池，任何其他維修必須由授權服務代表進行。

電池更換



注意事項

- 將遙控器上的電池盒旋開。鬆開底部然後將電池拉出取下。
- 請勿反向安裝電池，否則有可能造成電池短路。
- 請勿嘗試拆除電池或對其充電。將電池遠離火源。
- 安裝新電池 (電池型號 CR 2032) 時，請遵照電池製造商的說明。
- 請務必裝回遙控器中的螺絲，並且瞭解警告區域的電池風險資訊。

不可清洗的濾網裝置

- 您的濾網裝置不可清洗並且不可回收。
- 若未及時更換濾網裝置，則可能導致產品效能和外觀發生變化。
- 新濾網裝置可從 www.dyson.tw/support / www.dyson.hk/support 購買。

自動斷電

- 為了您的安全，此產品附有自動斷電開關，以便在產品翻倒或是過熱時啟動。如果該開關啟動，請先拔下產品的插頭，讓它冷卻。在重新啟動產品之前，請先檢查並清除任何阻塞，並確保該產品是在堅固的水平表面上。
- 在暖風模式下，本產品將會在連續使用 9 小時後，自動切換為 OFF。若要重新啟動機器，請按遙控器或底座的電源「待機 ON/OFF」。

棄置資訊

- 戴森產品是由高級的可回收材料所製造。請儘可能回收使用。
- 請依照當地的法規或條例棄置或回收電池。
- 請將廢舊電池放置在兒童拿不到的地方，因為誤吞後仍會對兒童造成危險。
- 您的濾網裝置不可清洗並且不可回收。
- 請按照當地法規或條例丟棄壽命耗盡的濾網裝置。
- 電器報廢前應取出電池。取出電池前電器應切斷電源。請依照當地的法規或條例安全棄置電池。

2 年保固

戴森 2 年有限保固的條款和條件

保固範圍

- 如果您的戴森產品在購買或交貨之後的 2 年內期間發現因故障材料、製作工藝或功能而出現瑕疵，將由戴森決定提供戴森產品的修理或更換服務 (如果有任何零件缺貨或停止生產，戴森可將零件更換為功能性的替代零件)。
- 本產品在銷售國家/地區使用的情況下，本保固方可生效。

不保固範圍

- 替換濾網裝置。本產品的濾網裝置不屬於保固範圍。
- 因下列情況造成的產品需維修或更換不在戴森保固範圍內：
- 因不進行建議的產品維護而導致的損壞。
 - 使用或保養疏忽、濫用、粗心操作或處理本電器時未能遵照戴森使用者手冊所造成的意外損壞和故障。
 - 將產品用於任何正常居家使用以外的目的。
 - 未依照戴森說明手冊組裝或安裝零件。
 - 使用非戴森原廠的零件與配件。
 - 錯誤安裝 (戴森安裝的除外)。
 - 非戴森或其授權代理所執行的維修或改動。
 - 阻塞 – 請參考本戴森操作手冊，瞭解如何檢查與清除阻塞的詳細資訊。
 - 正常磨損和損耗 (例如保險絲等)。
 - 由於電池壽命或電池使用而使得電池放電時間減少 (如適用)。

如果您對產品保固範圍有任何疑問，請聯絡戴森。

保固範圍概要

- 保固將於購買日開始生效 (若送貨日期較晚則以收到貨該日為準)。
- 在您的戴森產品進行任何處理之前，您必須提供 (原始及後續的) 交貨/購買的證明。沒有此證明，執行的任何工作都將會收取費用。請保留您的收據或是送貨單。
- 所有保固服務皆由戴森或其授權代理提供。
- 所有換掉的零件皆為戴森財產。
- 維修或更換仍在保固期間的戴森產品並不會延長保固的期間。
- 保固權益是戴森額外提供給您的權益，不影響您的法定消費者權利。

重要資料保護

您註冊戴森產品或是 MyDyson™ 應用程式時，將需要提供給我們基本的聯絡資訊。

註冊戴森產品時：

- 您將需要提供給我們基本的聯絡資訊，以註冊產品並讓我們得以支援您的保固。

透過 MyDyson™ 應用程式註冊時：

- 您將需要提供給我們基本的聯絡資訊，以註冊 MyDyson™ 應用程式，這將可讓我們安全地將產品連結至應用程式的執行個體。
- 您註冊時，將有機會選擇是否要接收我們的訊息。如果您選擇接收戴森的訊息，我們將會傳送特殊優惠的詳細資訊以及最新產品的訊息。
- 我們絕不會將您的資訊賣給第三方，而且只會依據我們網站上提供的隱私權政策所定義，來使用您分享給我們的資訊；我們的網站位於 [privacy.dyson.com](https://www.privacy.dyson.com)。

限用物質含有情況標示
MARKING OF THE PRESENCE
CONDITION OF THE
RESTRICTED SUBSTANCES

設備名稱 Equipment Name : 三合一涼暖空氣清淨機			
單元 Unit			
	鎘 (Cd) Cadmium	鉛 (Pb) Lead	汞 (Hg) Mercury
外殼，機身 External chassis, body	○	○	○
內部機架 Internal chassis	○	○	○
控制器及其部件 Controller & parts	○	○	○
印刷電路板及電子部件 Printed circuit board & components	○	—	○
電機元件 Motor Assembly	○	—	○
加熱器元件 Heater Assembly	○	—	○
熱斷路器部件 Thermal Cut-out	○	—	○

備考1. “○” 係指該項限用物質之百分比含量未超出百分比含量基準值。

Note 1: “○” Indicate that the percentage content of the restricted substance does not exceed the percentage of reference value of presence

備考2. “—” 係指該項限用物質為排除項目

Note 2: “—” indicates that the restricted substance corresponds to the exemption

型號 (型式) Type Designation				: HP10
限用物質及其化學符號 Restricted Substance and its chemical symbol				
	六價鉻 (Cr ⁺⁶) Hexavalent Chromium	多溴聯苯 (PBB) Polybrominated biphenyls	多溴二苯醚 (PBDE) Polybrominated diphenyl ethers	
	○	○	○	
	○	○	○	
	○	○	○	
	○	○	○	
	○	○	○	
	○	○	○	
	○	○	○	

備考3. “超出0.1wt%” 及 “超出0.01wt%” 係指限用物質之百分比含量超出百分比含量基準值。

Note 3: “Exceeding 0.1 wt%” and “exceeding 0.01 wt%” indicate that the percentage content of the restricted substance exceeds the reference percentage value of presence condition

KR

중요 안전 지침

⚠ 경고

제품과 리모컨에는 모두 자석이 들어있습니다.

1. 맥박 조정기와 제세동기 등 신체에 이식된 의료기기는 강한 자기장에 의해 영향을 받을 수 있습니다. 귀하 또는 가족 구성원이 신체에 이식된 의료기기나 제세동기를 사용하는 경우, 리모컨을 주머니에 넣거나 이러한 장치 주변에 두지 않도록 하십시오.
2. 신용카드 및 전자 저장 장치도 자석에 의해 영향을 받을 수 있으므로 리모컨 가까이나 제품 위에 놓아두지 마십시오.

화재, 감전 또는 부상의 위험을 줄이기 위한 방법:

3. 이 기기의 일부 부품은 매우 뜨거워질 수 있고 화상의 원인이 될 수 있습니다. 어린이나 신체 허약자가 있는 곳에서는 특별히 주의를 기울여야 합니다.
4. 신체적, 감각적, 지적으로 미숙련되었거나 경험 또는 지식이 부족한 사람, 또는 어린이는 안전한 제품 사용법을 인지한 보호자의 감독이나 지시 없이 이 제품을 사용할 수 없습니다. 어린이가 제품을 가지고 놀지 않도록 관리 감독이 필요합니다.
5. 기기가 있어야 할 정상 작동 위치에 있거나 설치되어 있고 안전한 방식으로 기기를 사용하고 이와 관련된 위험을 이해할 수 있도록 어린이에게 지도하거나 설명한 경우, 3세 이상 8세 미만인 어린이는 기기를 켜고 끄는 것만 할 수 있습니다. 3세 이상 8세 미만의 어린이가 기기에 플러그를 꽂거나 기기를 조정하고 청소하거나

유지보수를 해서는 안 됩니다.
지속적으로 감독하지 않는 한 3
세 미만의 어린이는 멀리 떨어져
있어야 합니다.

6. 이 제품을 콘센트 바로 아래에
두지 마십시오.
7. 이 제품을 욕실, 샤워실, 수영장
근처에서 사용하지 마십시오.
8. 제품을 떨어뜨렸거나 제품에 눈에
보이는 손상이 있는 경우에는
사용하지 마십시오.
9. 제품을 항상 평평하고 안정적인
표면에서 사용하십시오.
10. 과열 및 화재 예방을
위해서 제품을 다른 것으로
덮어두지 마십시오. 
11. 전원 케이블이 손상되었다면 안전
문제를 예방하기 위해 다이슨
서비스 센터나 이에 상응하는
전문가를 통해 케이블을 교체 또는
수리하여야 합니다.
12. 옥외 및 젖은 표면에서 사용하지
마시고 젖은 손으로 제품의 부품이나
플러그를 만지지 마십시오.
13. 제품을 가연성 액체, 수증기,
방향제 및 아로마 오일로부터
떨어뜨려 놓으십시오.
14. 항상 벽 콘센트에 직접 플러그를
꽂으십시오. 과부하로 케이블이
과열되어 화재가 발생할 수 있으므로
절대 멀티탭 또는 멀티콘센트를
사용하지 마십시오.
15. 제품이 손상되었거나 물에 젖은
경우에는 사용하지 마십시오.
16. 제품 및 케이블을 뜨거운 표면에
닿지 않도록 하십시오. 가구나
가전제품 밑에 설치하지 마십시오.
17. 개구부에 어떠한 물체도 넣지
마십시오. 감전이나 화재를
일으키거나 기기에 손상을 입힐
수 있습니다.
18. 항상 제품의 밑부분을 잡고
운반하십시오. 앰프를 잡고
운반하지 마십시오.
19. 플러그와 콘센트 간 고정력이 느슨하게
되거나 플러그가 매우 뜨거워진
경우 콘센트를 교체할 필요가

- 있습니다. 콘센트를 교체하려면 전문 엔지니어에게 문의하십시오.
20. 지속적인 감시가 이루어지는 경우를 제외하고는 이 제품을 거동이 불편한 사람들만 있는 작은 공간에서는 사용하지 마십시오.
 21. 화재 위험을 줄이려면 직물, 커튼 또는 기타 가연성 소재를 공기 출구로부터 최소 1미터 이상 거리에 두십시오.
 22. 청소, 기기 유지, 필터 교체 등의 작업을 수행하기 전에 반드시 전원을 차단하거나 플러그를 뽑으십시오.
 23. 1 등급 레이저 제품 레이저가 내장되어 있습니다. 용도에 부합하지 않는 목적으로 본 기기를 사용하거나 부품덮개가 손상될 경우 위험한 레이저가 방사될 수 있습니다. 광원을 직접 바라보지 마십시오. 레이저는 소량만 방사되어도 눈과 피부를 손상시킬 수 있습니다. 레이저 튜브를 변경하거나 분해하지 마십시오.
 24. 화학적 화상 및 질식 위험. 배터리를 어린이의 손이 닿지 않는 곳에 두십시오. 이 제품에는 리튬 소형 전지가 들어 있습니다. 새 제품 또는 사용한 리튬 소형 전지를 삼키거나 신체 내부로 들어가면, 심각한 화상을 유발하고 2시간 만에 사망할 수 있습니다. 배터리 케이스를 항상 단단히 잠그십시오. 배터리 케이스가 단단히 닫히지 않으면, 제품 사용을 중지하고 배터리를 제거한 후 어린이의 손이 닿지 않는 곳에 보관하십시오. 배터리를 삼켰거나 신체 내부로 들어갔다고 판단되는 경우에는 즉시 의사의 진료를 받으십시오.

이 설명서를 읽고 보관해 두십시오.

추가 정보

기기 유지 관리

- 기기가 항상 최상의 성능으로 작동하려면 정기적으로 청소하고 막힘을 점검하는 것이 중요합니다.

기기 청소

- 먼지가 기기의 표면에 쌓인 경우 마른 헝겊으로 루프 증폭기, 덮개 및 기타 부품의 먼지를 닦아내십시오.
- 슈라우드의 공기 흡입구와 루프 증폭기 내부의 작은 구멍에 막힌 부분이 있는지 확인하십시오.
- 부드러운 솔을 사용하여 먼지와 부스러기를 제거하십시오.
- 기기 청소 시 세제나 광택제를 사용하지 마십시오.

교체 가능 부품

- 기기는 교체 가능한 필터와 배터리를 포함하고 있으며, 기기에 대한 모든 서비스는 공인 서비스 담당자가 수행해야 합니다.

배터리 교환



주의

- 리모컨 배터리 케이스의 나사를 풀니다. 밀부분을 풀고 배터리를 잡아당겨 분리합니다.
- 배터리를 반대 방향으로 넣거나 단락시키지 마십시오.
- 배터리를 분해하거나 충전하지 마십시오. 불 가까이에 두지 마십시오.
- 새 배터리를 설치할 때에는 배터리 제조업체의 안내를 따르십시오(배터리 종류 CR 2032).
- 항상 리모컨의 나사를 다시 조이고 경고 섹션의 배터리 위험을 참조하십시오.

세척 불가능한 필터 장치

- 필터는 세척할 수 없으며 재활용할 수 없습니다.
- 필터를 교체하려면 그림에 표시된 단계를 따르십시오.
- 알림 메시지가 표시되었을 때 필터기를 교체하지 못하면 제품 성능과 외관에 변화가 나타날 수 있습니다.
- 새로운 필터는 www.dyson.co.kr에서 구입할 수 있습니다.

자동 차단기

- 안전을 위해 본 기기에는 기기가 쓰러지거나 가열될 경우 작동되는 자동 차단 스위치가 있습니다. 스위치가 작동될 경우 플러그를 뽑고 기기를 식히십시오. 기기를 재가동하기 전에 막힌 부분이 없는지 확인하고 기기를 평평한 바닥에 놓아야 합니다.
- 난방 모드에서 기기는 9시간 지속 사용 후 자동으로 전원이 꺼집니다. 기기를 다시 시작하려면 리모컨 또는 제품의 아래 부분에 있는 대기 온/오프 버튼을 누르거나 다이슨 링크 앱을 통해 재시작합니다.

폐기 정보

- 다이슨 제품은 재활용 가능한 고급 소재로 만들어집니다. 가급적 재활용하시기 바랍니다.
- 지역 법령 또는 규정에 따라 배터리를 폐기하거나 재활용하십시오.
- 어린이가 배터리를 삼켜 다치지 않도록 사용한 배터리를 어린이의 손이 닿지 않는 곳에 두십시오.
- 필터는 세척할 수 없으며 재활용할 수 없습니다.
- 다 쓴 필터는 지역 법령 또는 규정에 따라 폐기하십시오.
- 제품을 폐기하기 전에 배터리를 반드시 제품에서 제거해야 합니다.

2년 보증 기간

다이슨 2년 보증 기간 약관

품질 보증 범위

- 잘못된 소재, 세공 및 기능으로 인해 다이슨 제품에 결함이 발생한 경우 (다이슨의 판단 하에) 제품 구입 또는 배송 후 2년간 수리 및 교체가 가능합니다(부품이 더 이상 이용 가능하지 않거나 생산되지 않는 경우 작동할 수 있는 교체 부품으로 교환해드립니다).
- 이 보증은 제품을 구입한 국가에서 사용할 때만 유효합니다.

보증 범위 예외

- 필터 교체, 제품의 필터는 보증 사항이 아닙니다.
- 다이슨은 다음의 결과로 인한 제품의 수리나 교체를 보증하지 않습니다.
- 제품 유지보수를 위한 권장사항을 이행하지 않음으로 발생한 손상.
- 부적절한 사용이나 관리, 오용, 방치, 부주의한 사용 또는 다이슨 사용자 설명서를 따르지 않은 기기의 조작으로 인한 우발적인 손상, 결함.
- 일반적인 국내 가정용 목적 이외의 다른 용도로 제품을 사용한 경우.
- 다이슨의 안내에 따라 부품을 조립하거나 설치하지 않고 사용한 경우.
- 다이슨의 정품이 아닌 부품과 액세서리를 사용한 경우.
- 부적절한 설치(다이슨이 설치한 경우 제외).
- 다이슨이나 다이슨 공식 대리점 이외의 당사자가 실시한 수리나 개조.
- 막힌 부분 - 막힌 부분을 점검하고 청소하는 방법에 관한 자세한 내용은 다이슨 사용 설명서의 '기기 관리 요령' 섹션과 그림을 참조하십시오.
- 정상적인 마모나 손상(예, 긁힘 등).
- 배터리 수명 또는 사용으로 인한 배터리 방전 시간의 감소(해당할 경우).

보증 범위에 대해 질문이 있을 경우 다이슨으로 연락해 주십시오.

보증 범위 요약

- 보증은 구입일(또는 배송일)부터 유효합니다.
- 다이슨 제품에 대한 작업이 수행되기 전에 (원본 및 일체의 후속) 배송/구입 증빙자료를 제공해야 합니다. 해당 증빙자료가 없는 경우 수행되는 작업에 대해 요금이 부과됩니다. 영수증 또는 배송 증명서를 보관하십시오.
- 모든 작업은 다이슨 또는 공식 대리점에 의해 수행됩니다.
- 수리 후 회수한 모든 부품은 다이슨의 소유 자산이 됩니다.
- 보증 범위 내에 제품을 수리 또는 교체 받았더라도 보증 기간이 연장되지는 않습니다.
- 보증은 추가적인 혜택이며 이 혜택이 귀하의 소비자로서의 법적 권리에 영향을 주지는 않습니다.

개인정보보호 관련

Dyson 기기를 등록하거나 또는 MyDyson™ 앱을 통해 Dyson 기기를 등록할 때, 기본 연락처 정보를 제공해야 합니다.

다이스 제품 등록 및 앱 가입:

- 제품을 등록하고 당사의 서비스를 이용하려면 기본 연락처 정보를 제공해야 합니다.

MyDyson™ 앱을 통해 등록하는 경우:

- MyDyson™ 앱을 등록하려면 기본 연락처 정보를 제공해야 합니다. 이렇게 하면 귀하의 머신을 앱 인스턴스에 안전하게 연결할 수 있습니다.
- 등록할 때 당사로부터 통신문 수신 여부를 선택할 수 있습니다. Dyson의 커뮤니케이션에 동의하면 특별 제안에 대한 세부 정보와 최신 혁신 소식을 보내드립니다.
- Dyson 기기를 등록하거나 또는 MyDyson™ 앱을 통해 Dyson 기기를 등록할 때, 기본 연락처 정보를 제공해야 합니다.
- 귀하의 정보를 절대로 제3자에게 양도하지 않습니다. 제공해주신 정보는 다음 사이트에서 볼 수 있는 당사의 개인정보보호정책에 따라 사용됩니다. privacy.dyson.com.

ID PETUNJUK PENTING PERINGATAN KESELAMATAN PERINGATAN

Peralatan dan Remote Control
keduanya mengandung Magnet

1. Alat pemacu jantung atau Defibrilator dapat dipengaruhi oleh medan magnet yang kuat. Jika ada Anda atau seseorang di tempat tinggal Anda menggunakan alat pemacu jantung atau Defibrilator, diharapkan untuk tidak menempatkan Remote Kontrol di saku dan di daerah dekat sekitar Anda.
2. Kartu Kredit dan media penyimpanan elektronik lainnya dapat memengaruhi medan magnet. Oleh karena itu harus dijauhkan dari Remote Kontrol dan bagian atas alat.

UNTUK MENURUNKAN RISIKO
KEBAKARAN, SENGATAN LISTRIK,
ATAU CEDERA:

3. Beberapa bagian dari peralatan ini bisa menjadi sangat panas dan menyebabkan luka bakar. Perhatian khusus harus diberikan di tempat-tempat yang terdapat

anak-anak dan orang-orang yang rentan.

4. Alat ini tidak dianjurkan untuk digunakan oleh orang (termasuk anak-anak) yang memiliki keterbatasan fisik, panca indera atau cacat mental, atau kurang ahli dan berpengalaman, kecuali mereka yang telah diberikan pengarahan atau petunjuk cara menggunakan peralatan tersebut oleh orang yang bertanggung jawab atas keselamatan mereka. Anak - anak harus dalam pengawasan dan memastikan bahwa mereka tidak bermain dengan alat ini.
5. Anak-anak berusia 3 tahun dan kurang dari 8 tahun hanya boleh menyalakan/mematikan alat yang disediakan apabila alat telah diletakkan atau dipasang dalam peruntukan posisi pengoperasian normal dan anak-anak telah diberi pengawasan atau instruksi mengenai penggunaan alat dengan cara yang aman dan mengerti tentang bahaya yang terlibat Anak-anak berusia 3 tahun dan kurang dari 8 tahun tidak diperbolehkan memasang steker, mengatur dan membersihkan alat atau melakukan perawatan pengguna. Jauhkan dari jangkauan anak-anak berusia kurang dari 3 tahun tanpa pengawasan.
6. Jauhkan dari jangkauan anak-anak berusia kurang dari 3 tahun tanpa pengawasan.
7. Peralatan ini tidak boleh berada tepat di bawah stopkontak.
8. Jangan menggunakan peralatan ini di dekat bak mandi, shower, atau kolam renang.

9. Jangan gunakan alat ini jika terjatuh atau terlihat adanya kerusakan.
10. Selalu gunakan peralatan ini pada permukaan yang horizontal dan stabil.
11. Untuk menghindari risiko kepanasan dan kebakaran, jangan tutupi alat ini. 
12. Kabel daya yang rusak hanya boleh diganti atau diperbaiki oleh pabrikan, teknisi servisnya, atau pihak lain yang memiliki kualifikasi untuk menghindari bahaya.
13. Jangan gunakan peralatan di luar ruangan atau di permukaan yang basah dan jangan memegang bagian alat atau steker dengan tangan basah.
14. Jauhkan peralatan dari cairan yang mudah terbakar, uap, penyegar udara, dan minyak esensial.
15. Sambungkan steker langsung ke stopkontak di dinding. Jangan sekali-kali menggunakan kabel ekstensi karena kelebihan muatan dapat menyebabkan kabel terlalu panas dan terbakar.
16. Jangan gunakan peralatan ini jika sudah rusak atau terendam air.
17. Jauhkan peralatan dan kabelnya dari permukaan yang panas. Jangan meletakkan kabel di bawah furnitur atau peralatan.
18. Jangan memasukkan benda apa pun ke dalam bukaan amplifier udara karena ini dapat menyebabkan sengatan listrik.
19. Selalu bawa peralatan ini di bagian dasarnya dan bukan di loop amplifier.
20. Jika ada bagian yang longgar antara steker dan soket atau stekernya menjadi sangat panas, soket mungkin perlu diganti. Mintalah teknisi

- listrik yang kompeten untuk mengganti soketnya.
21. Jangan gunakan peralatan ini di ruangan yang berukuran kecil saat ruangan ditempati oleh orang yang tidak mampu meninggalkan kamar sendiri, kecuali jika terdapat pengawasan terus menerus.
 22. Untuk mengurangi risiko kebakaran, jauhkan tekstil, gorden, atau bahan mudah terbakar lainnya, dengan jarak minimum 1 meter dari lubang udara.
 23. Putuskan daya atau cabut steker sebelum membersihkan, melakukan perawatan apa pun, atau Pada saat mengganti filter. Selalu cabut alat saat tidak digunakan.
 24. Peralatan ini mengandung laser Kelas 1. Penggunaan peralatan yang tidak sesuai dengan tujuannya atau kerusakan pada kerangka dapat menyebabkan keluarnya radiasi laser yang berbahaya. Jangan menatap sumber cahaya. Radiasi laser dapat menyebabkan cedera mata dan kulit, meskipun dalam dosis yang kecil. Jangan mencoba untuk memodifikasi atau membongkar pipa laser.
 25. **PERINGATAN:** Bahaya Luka Bakar Kimia dan Tersedak. Jauhkan baterai dari jangkauan anak-anak. Produk ini menggunakan baterai sel kancing/koin litium. Jika tertelan atau masuk ke tubuh, baterai sel kancing/koin litium dapat mengakibatkan luka bakar serius pada bagian dalam dan menimbulkan kematian dalam waktu kurang dari 2 jam. Selalu lindungi kompartemen baterai dengan sempurna. Jika kompartemen baterai tidak

menutup sempurna, hentikan penggunaan produk, lepas baterai, dan jauhkan dari anak-anak. Jika Anda curiga baterai telah tertelan atau memasuki bagian tubuh mana pun, segera cari pertolongan medis.

BACA DAN SIMPAN PETUNJUK INI

Informasi tambahan

Memelihara mesin Anda

- Agar selalu mendapatkan kinerja terbaik dari mesin Anda, penting untuk membersihkan dan memeriksa adanya sumbatan secara berkala.

Membersihkan mesin Anda

- Jika debu menumpuk di permukaan mesin Anda, bersihkan debu dari ampli loop, selubung, dan komponen lainnya hanya dengan kain kering yang bersih.
- Cari sumbatan pada lubang saluran masuk udara di selubung dan celah kecil dalam ampli loop.
- Gunakan sikat lembut untuk menghilangkan debu dan kotoran.
- Jangan gunakan detergen atau semir untuk membersihkan mesin Anda.

Komponen yang Dapat Diganti

- Mesin Anda memiliki unit filter dan baterai yang dapat diganti, sedangkan servis lainnya harus dilakukan oleh perwakilan servis resmi.

Penggantian baterai



PERHATIAN

- Lepaskan wadah baterai pada kendali jarak jauh. Longgarkan bagian bawah dan tarik untuk melepas baterai.
- Jangan memasang baterai terbalik atau melakukan sambungan pendek pada baterai.
- Jangan membongkar atau mengisi ulang baterai. Jauhkan dari api.
- Ikuti petunjuk produsen ketika memasang baterai baru (baterai tipe CR 2032).
- Pastikan selalu memasang kembali sekrup di remote control dan merujuk pada informasi peringatan tentang bahaya pada baterai di bagian peringatan.

UNIT FILTER SEKALI PAKAI

- Unit filter tidak dapat dicuci dan didaur ulang.
- Kesalahan pergantian filter dapat mengakibatkan perubahan pada kinerja dan penampilan produk.
- Unit filter baru dapat dibeli di www.dyson.co.id/support.

PEMUTUSAN ARUS OTOMATIS

- Demi keamanan Anda, peralatan ini dilengkapi dengan sakelar pemutus arus otomatis yang beroperasi jika peralatan ini miring atau mengalami panas berlebih. Jika sakelar beroperasi, cabut steker dan biarkan mendingin. Sebelum menyalakan kembali mesin, periksa dan bersihkan setiap hambatan dan pastikan bahwa peralatan berada di permukaan yang kokoh.
- Dalam mode pemanasan, peralatan akan secara otomatis 'OFF' setelah 9 jam penggunaan terus-menerus. Untuk menyalakan ulang, tekan tombol Siaga ON/OFF di kendali jarak jauh maupun di bagian bawah peralatan.

Informasi pembuangan

- Produk-produk Dyson terbuat dari bahan berkualitas tinggi yang dapat didaur ulang. Sedapat mungkin, lakukanlah daur ulang.
- Buang atau daur ulang baterai sesuai dengan peraturan setempat.
- Jauhkan baterai bekas dari anak-anak karena ini dapat berbahaya jika tertelan.
- Unit filter tidak dapat dicuci dan didaur ulang.
- Buang unit filter yang habis pakai sesuai dengan peraturan atau hukum setempat.
- Baterai harus dilepas dari produk sebelum pembuangan produk.

Garansi terbatas 2 tahun

Syarat dan ketentuan dari garansi terbatas 2 tahun dyson

Apa saja yang termasuk garansi

- Perbaikan atau penggantian peralatan Dyson Anda (atas kebijakan Dyson) apabila ditemukan cacat akibat ketidaksempurnaan bahan, pengerjaan, atau fungsi dalam kurun waktu 2 tahun sejak tanggal pembelian atau penyerahan (jika suku cadang tidak lagi tersedia atau tidak lagi diproduksi, maka Dyson akan menggantinya dengan suku cadang yang berfungsi sama).
- Garansi ini berlaku hanya bila peralatan digunakan di negara tempat mesin tersebut dijual.

Apa saja yang tidak termasuk garansi

- Pergantian unit filter. Filter tidak termasuk dalam garansi.

Dyson tidak menjamin perbaikan atau penggantian produk jika kerusakan di akibatkan oleh:

- Kerusakan yang di akibatkan karena tidak menjalankan perawatan sebagaimana yang disarankan.
- Kerusakan yang tidak disengaja, kesalahan yang disebabkan oleh kelalaian penggunaan, penyalahgunaan, kelalaian, pengoperasian secara tidak hati-hati, atau penanganan mesin yang tidak sesuai dengan Petunjuk Penggunaan Dyson.
- Penggunaan mesin untuk apa pun selain dari keperluan rumah tangga sehari-hari.
- Penggunaan suku cadang yang tidak dirakit atau dipasang sesuai petunjuk dari Dyson.
- Penggunaan suku cadang dan aksesoris yang bukan komponen asli Dyson.
- Pemasangan tidak sempurna (kecuali dipasang oleh Dyson).
- Perbaikan atau perubahan yang dilakukan oleh pihak-pihak selain dari Dyson atau agen-agen resminya.
- Penyumbatan – Harap merujuk ke bagian dan ilustrasi 'CARA MERAWAT MESIN' dalam manual Pengguna Dyson Anda untuk detail selengkapnya tentang cara mencari dan membersihkan penyumbatan.
- Aus biasa (mis. sekering dll.)
- Berkurangnya daya baterai karena usia baterai atau pemakaian (sesuai ketentuan).

Jika Anda ragu dengan apa yang dicakup oleh garansi, silakan hubungi Dyson.

Ringkasan jaminan

- Garansi berlaku dari tanggal pembelian (atau tanggal pengiriman produk).
- Anda harus memberikan bukti pembelian (baik asli maupun salinan) sebelum pekerjaan perbaikan dilakukan pada mesin Dyson Anda. Tanpa bukti pembelian tersebut, semua pekerjaan yang dilakukan akan dikenakan biaya. Simpan bukti pembelian nota tanda terima atau nota catatan penyerahan.
- Semua pekerjaan akan dilakukan oleh Dyson atau agen resminya.
- Suku cadang yang diganti oleh Dyson akan menjadi milik Dyson.
- Perbaikan atau penggantian peralatan Dyson yang ada dalam garansi tidak akan memperpanjang masa garansi.
- Garansi memberikan manfaat yang bersifat tambahan dan tidak memengaruhi hak Anda sebagai konsumen berdasarkan hukum.

Informasi perlindungan data penting

Anda diminta untuk memberikan data ketika meregistrasi mesin Dyson Anda atau meregistrasi aplikasi MyDyson™ Anda.

Saat mendaftarkan mesin Dyson Anda:

- Anda harus memberikan data pribadi untuk mendaftarkan produk untuk memperoleh dukungan garansi dari kami.

Jika mendaftar lewat Apk MyDyson™

- Anda diminta memberikan informasi kontak dasar untuk mendaftarkan Apk MyDyson™ sehingga kami dapat menghubungkan produk Anda dengan aman ke aplikasi yang Anda minta.
- Setelah mendaftar, Anda punya kesempatan untuk memilih apakah Anda ingin menerima komunikasi dari kami atau tidak. Jika Anda memilih untuk menerima komunikasi dari Dyson, kami akan mengirimkan informasi perihal penawaran istimewa dan kabar inovasi terbaru dari kami.
- Kami tidak akan menjual informasi data pribadi Anda kepada pihak ketiga, kami hanya menggunakan informasi yang Anda bagikan dengan kami sebagaimana ditentukan oleh kebijakan privasi kami yang tersedia di situs web kami di [privacy.dyson.com](https://www.dyson.com/privacy).

TH

คำแนะนำด้านความปลอดภัยที่สำคัญ

⚠ คำเตือน

เครื่องใช้ไฟฟ้าและรีโมทประกอบด้วยแม่เหล็ก

1. เครื่องกระตุ้นและตัวคุมจังหวะหัวใจ อาจได้รับผลกระทบจากสนามแม่เหล็ก ถ้าท่านหรือคนในบ้านของท่านคนใดมีเครื่องกระตุ้นและตัวคุมจังหวะหัวใจ จงหลีกเลี่ยงการนำรีโมทใส่ไว้ในกระเป๋าเสื้อหรือใกล้อุปกรณ์
2. บัตรเครดิตและอุปกรณ์จัดเก็บข้อมูลอิเล็กทรอนิกส์อาจได้รับผลกระทบจากแรงแม่เหล็ก ควรเก็บให้ห่างจากรีโมทและบริเวณด้านบนของอุปกรณ์

เพื่อลดความเสี่ยงการเกิดไฟไหม้ ไฟฟ้าช็อต หรือการได้รับบาดเจ็บ:

3. บางส่วนของอุปกรณ์นี้อาจร้อนจัดและทำให้เกิดแผลไฟไหม้ได้ ต้องใส่ใจเป็นพิเศษเมื่อมีเด็กและผู้สูงอายุอยู่ในบริเวณนั้น
4. เครื่องใช้ไฟฟ้านี้ไม่มีเจตนาให้ใช้โดยบุคคล (รวมถึงเด็ก) ที่ด้อยความสามารถทางร่างกาย ทางประสาทสัมผัสหรือจิตใจ หรือขาดประสบการณ์และความรู้ เว้นแต่ว่าจะได้รับการควบคุมดูแลหรือการสอนเกี่ยวกับการใช้เครื่องใช้ไฟฟ้าโดยบุคคลที่รับผิดชอบต่อความปลอดภัยของบุคคลเหล่านั้น เด็กควรได้รับการควบคุมดูแลเพื่อให้แน่ใจว่าจะไม่เล่นเครื่องใช้ไฟฟ้า
5. เด็กที่มีอายุตั้งแต่ 3 ปีขึ้นไปและไม่เกิน 8 ปี ควรเปิดหรือปิดเครื่องที่วางหรือติดตั้งในตำแหน่งตามที่กำหนดไว้ เด็ก ๆ ต้องอยู่ภายใต้การกำกับดูแลหรือได้รับคำแนะนำเกี่ยวกับการใช้อุปกรณ์อย่างปลอดภัยและเข้าใจถึงอันตรายที่เกี่ยวข้อง เด็กที่มีอายุตั้งแต่ 3 ปีขึ้นไปและไม่เกิน 8 ปี จะต้องไม่เสียบปลั๊ก ควบคุมและทำความสะอาดอุปกรณ์หรือทำการบำรุงรักษาด้วยตนเอง เด็กอายุต่ำกว่า 3 ปีไม่ควรเข้าใกล้อุปกรณ์เว้นแต่จะอยู่ภายใต้การดูแลอย่างต่อเนื่อง

6. เด็กอายุต่ำกว่า ๓ ปีไม่ควรเข้าใกล้อุปกรณ์
เว้นแต่จะอยู่ภายใต้การดูแลอย่างต่อเนื่อง
7. อุปกรณ์นี้จะต้องไม่วางอยู่ใต้เท้าเสีย
8. ห้ามใช้อุปกรณ์นี้ในบริเวณใกล้เคียงกับ
อ่างอาบน้ำ ฝักบัว หรือสระว่ายน้ำ
9. อย่าใช้อุปกรณ์นี้หากตกพื้นหรือหากมี
สัญญาณของความเสียหายที่มองเห็นได้
10. โปรดใช้อุปกรณ์นี้บนพื้นผิวที่มั่นคงในแนว
นอน
11. เพื่อหลีกเลี่ยงความเสี่ยงในการเกิด 
ความร้อนสูงเกินและไฟไหม้ ห้ามคลุม
ผลิตภัณฑ์นี้
12. ถ้าสายอ่อนง่ายกำลังไฟฟ้าชำรุด ต้อง
ให้ผู้ทำหรือตัวแทนฝ่ายบริการหรือผู้มี
คุณสมบัติคล้ายกันเป็นผู้เปลี่ยน เพื่อหลีกเลี่ยง
ความเสี่ยงอันตราย
13. ห้ามใช้ในที่กลางแจ้งหรือบนพื้นผิวที่เปียก
ห้ามจับส่วนใดๆ ของอุปกรณ์หรือเสีย
ปลั๊กในขณะที่มือเปียก
14. เก็บอุปกรณ์ให้ห่างจากของเหลวที่ไวไฟ ไอร
ระเหย น้ำหอมปรับอากาศและน้ำมันหอม
ระเหย
15. เสียบบปลั๊กไปในเต้าเสียบที่ผนังโดยตรง
เสมอ ห้ามใช้กับสายต่อ เนื่องจากการใช้
กำลังไฟฟ้าที่มากเกินไปอาจทำให้สายไฟ
ร้อนจัดและก่อให้เกิดไฟไหม้ได้
16. ห้ามใช้อุปกรณ์นี้หากอุปกรณ์ได้รับความ
เสียหายหรือจมน้ำ
17. เก็บอุปกรณ์นี้และสายเคเบิลออกจาก
พื้นผิวที่ร้อน ห้ามวางสายเคเบิลใต้
เฟอร์นิเจอร์หรืออุปกรณ์
18. อย่าใส่วัตถุใด ๆ เข้าไปในช่องขยายแรงลม
เพราะอาจทำให้เกิดไฟฟ้าช็อต ไฟไหม้ หรือ
ทำให้เครื่องเสียหาย
19. โปรดถืออุปกรณ์ที่ฐาน ห้ามถือด้วยการ
หิ้วที่หัวเป่าลม
20. หากการเกิดความหลวมระหว่างปลั๊ก
และเต้ารับ หรือปลั๊กร้อนจัด อาจต้อง
เปลี่ยนเต้ารับ ตรวจสอบกับช่างไฟฟ้าที่มี
คุณสมบัติเหมาะสมเพื่อเปลี่ยนเต้ารับ
21. อย่าใช้อุปกรณ์นี้ในห้องเล็ก ๆ เมื่อมีผู้ที่ไม่
สามารถออกจากห้องได้ด้วยตัวเอง เว้นแต่
จะมีการดูแลอย่างใกล้ชิด
22. เพื่อลดความเสี่ยงจากไฟไหม้ ให้เก็บสิ่งทอ
ผ้าม่านหรือวัสดุไวไฟอื่น ๆ ให้ห่างจากช่อง
ระบายอากาศอย่างน้อย ๑ เมตร

23. ต้องแน่ใจว่าได้ตัดแหล่งจ่ายกำลังไฟฟ้า
ประธานของพัดลมออกก่อนทำการบำรุง
รักษาหรือทำความสะอาด
24. อุปกรณ์นี้มีเลเซอร์ประเภท ๑ การใช้งาน
ผิดวัตถุประสงค์หรือการทำให้ตัวเรือนเสีย
หายอาจส่งผลให้รังสีที่เป็นอันตรายหลุด
รอดออกมาได้ อย่าจ้องมองแหล่งกำเนิด
แสง การได้รับรังสีเลเซอร์ปริมาณเล็กน้อย
เป็นอันตรายต่อดวงตาและผิวหนัง อย่า
พยายามถอดหรือตัดแปลงท่อเลเซอร์
25. อันตรายจากการถูกลวกโดยสารเคมี
และการสำลักควันหรือไอสารระเหย เก็บ
แบตเตอรี่ให้พ้นจากเด็ก ผลิตภัณฑ์นี้
ประกอบไปด้วยแบตเตอรี่ลิเธียมแบบแบน/
กระดุม ถ้าแบตเตอรี่ลิเธียมแบบแบน/
กระดุมทั้งใหม่หรือที่ใช้แล้วถูกกลืนเข้าสู่
ร่างกาย อาจจะเป็นสาเหตุที่ทำให้เกิดการ
ไหม้ภายใน และทำให้เสียชีวิตได้ภายใน ๒
ชั่วโมง ตรวจสอบให้แน่ใจว่าช่องใส่แบตเตอรี่
นั้นพร้อมสมบูรณ์อยู่เสมอ ถ้าช่องใส่
แบตเตอรี่นั้นปิดไม่สมบูรณ์ ต้องหยุดการ
ใช้ผลิตภัณฑ์ นำแบตเตอรี่ออกจากเครื่อง
และเก็บให้พ้นจากมือเด็ก หากคุณคิดว่า
แบตเตอรี่ถูกกลืนเข้าไป หรือเข้าไปในส่วน
หนึ่งส่วนใดของร่างกาย ให้พบแพทย์โดย
ทันที

อ่านและเก็บรักษาเอกสาร ข้อแนะนำนี้ไว้

ข้อมูลเพิ่มเติม

การดูแลรักษาเครื่องของคุณ

- เพื่อให้เครื่องทำงานได้อย่างมีประสิทธิภาพสูงสุด การทำความสะอาดและตรวจสอบหา
สิ่งอุดตันเป็นประจำเป็นสิ่งสำคัญ

การทำความสะอาดเครื่องของคุณ

- หากมีฝุ่นสะสมบนพื้นผิวเครื่อง ให้ปิดฝุ่นออกจากหัวเป่าลม ที่ครอบฟیلเตอร์ และส่วน
ประกอบอื่น ๆ ด้วยผ้าสะอาดและผ้าแห้งเท่านั้น
- ตรวจสอบสิ่งอุดตันในรูรับลมเข้าบนที่ครอบฟیلเตอร์ และช่องเล็กๆ ในหัวเป่าลม
- ใช้แปรงขนนุ่มเพื่อกำจัดฝุ่นและเศษต่าง ๆ
- ห้ามใช้ผงซักฟอกหรือสารขัดเงาทำความสะอาดเครื่อง

ชิ้นส่วนที่สามารถเปลี่ยนได้

- เครื่องของคุณมีชุดไส้กรองและแบตเตอรี่แบบถอดเปลี่ยนได้ การให้บริการอื่นๆ ต้อง
ดำเนินการโดยตัวแทนผู้ให้บริการที่ได้รับอนุญาต

การเปลี่ยนแบตเตอรี่



ข้อควรระวัง

- คลายน็อตช่องใส่แบตเตอรี่ที่รีโมท คลายฐานแบตเตอรี่และดึงเพื่อถอดแบตเตอรี่ออก
- ห้ามใส่แบตเตอรี่กลับด้านหรือทำการลัดวงจรแบตเตอรี่
- อย่าพยายามทิ้งหรือชาร์จแบตเตอรี่ เก็บให้พ้นจากไฟ
- ทำตามคำแนะนำของผู้ผลิตแบตเตอรี่เมื่อติดตั้งแบตเตอรี่ก้อนใหม่ (แบตเตอรี่ชนิด CR
๒๐๓๒)
- ใส่สกรูทั้งหมดกลับเข้าไปในรีโมทคอนโทรลเสมอและอ่านอันตรายจากแบตเตอรี่ที่หิวข้อ
คำเตือน

ฟิวเตอร์ชนิดที่ไม่สามารถล้างได้

- ฟิวเตอร์ของท่านไม่สามารถล้างและไม่สามารถนำกลับมาใช้ใหม่ได้
- หากไม่ทำการเปลี่ยนฟิวเตอร์เมื่อถึงกำหนดอาจทำให้ความสามารถในการทำงานหรือลักษณะของผลิตภัณฑ์เปลี่ยนแปลงไป
- ชุดฟิวเตอร์ สามารถสั่งซื้อได้ที่ www.dyson.co.th หรือที่ MyDyson™ app

การตัดอัตโนมัติ

- เพื่อความปลอดภัยของท่าน อุปกรณ์เครื่องนี้ได้รับการติดตั้งสวิตช์ตัดอัตโนมัติที่จะทำงานเมื่อเครื่องหายใจขึ้นหรือร้อนเกินไป หากสวิตช์ทำงาน ให้ถอดปลั๊กไฟของอุปกรณ์ออกและปล่อยให้เย็น ก่อนที่จะรีเซ็ตารกอุปกรณ์ ให้ตรวจสอบและกำจัดการอุดตัน รวมทั้งตรวจสอบให้แน่ใจว่าเครื่องตั้งอยู่บนพื้นผิวที่มั่นคง
- ในโหมดทำความร้อน เครื่องจะเปลี่ยนเป็น ‘OFF’ (ปิด) โดยอัตโนมัติหลังจากใช้งานอย่างต่อเนื่อง ๕ ชั่วโมง หากต้องการรีเซ็ตารกเครื่อง ให้กดปุ่มสแตนด์บาย เปิด/ปิดบนรีโมทคอนโทรลหรือที่ฐานเครื่อง

ข้อมูลการกำจัด

- ผลิตภัณฑ์ Dyson ผลิตโดยวัสดุรีไซเคิลคุณภาพสูง ให้ทำการรีไซเคิลหากเป็นไปได้
- การทิ้งหรือการรีไซเคิลแบตเตอรี่ให้ปฏิบัติตามกฎระเบียบหรือข้อกำหนดของท้องถิ่น
- เก็บแบตเตอรี่ไว้ให้ห่างจากมือเด็ก เนื่องจากอาจก่อให้เกิดอันตรายหากกลืนเข้าไป
- ฟิวเตอร์ของท่านไม่สามารถล้างและไม่สามารถนำกลับมาใช้ใหม่ได้
- การทิ้งชุดตัวกรองที่เสื่อมสภาพแล้วให้ปฏิบัติตามข้อบัญญัติหรือระเบียบข้อบังคับของท้องถิ่น
- ควรถอดแบตเตอรี่ออกจากผลิตภัณฑ์ก่อนนำไปทิ้ง

การรับประกันแบบมีเงื่อนไขระยะเวลา ๒ ปี

ข้อกำหนดและเงื่อนไขของ DYSON ในการรับประกันแบบมีเงื่อนไข ระยะเวลา 2 ปี

สิ่งที่ครอบคลุมการรับประกัน

- การซ่อมหรือเปลี่ยนอุปกรณ์ Dyson ของท่าน (ขึ้นอยู่กับดุลพินิจของ Dyson) หากพบข้อบกพร่องอื่นเนื่องมาจากวัสดุมีปัญหา ฝีมือแรงงาน หรือฟังก์ชันการใช้งานภายในระยะเวลา ๒ ปีนับจากวันที่ซื้อหรือวันที่ส่งมอบ (หากอะไหล่ไม่สามารถหาได้ในท้องถิ่นหรือเลิกผลิตแล้ว Dyson จะเปลี่ยนเป็นอะไหล่ที่ใกล้เคียงกัน)
- การรับประกันนี้จะมีผลบังคับใช้เมื่อใช้อุปกรณ์ในประเภทที่ซื้อเท่านั้น

สิ่งที่ไม่ครอบคลุมการรับประกัน

- การเปลี่ยนชุดตัวกรอง ชุดตัวกรองของอุปกรณ์นั้นไม่ได้รับความคุ้มครองภายใต้การรับประกัน

Dyson ไม่รับประกันการซ่อมหรือเปลี่ยนผลิตภัณฑ์ซึ่งมีข้อบกพร่องอื่นเนื่องมาจากสาเหตุดังนี้:

- ความเสียหายที่เกิดจากการไม่บำรุงรักษาอุปกรณ์ตามที่แนะนำ
- ความเสียหายที่เกิดจากอุบัติเหตุ ข้อผิดพลาดอื่นเนื่องมาจากการใช้งานหรือกรณีที่ประมาท การใช้งานผิดประเภท การใช้งานที่ไม่เป็นไปตามคำแนะนำ การใช้งานอย่างไม่ระวัง หรือการใช้งานเครื่องที่ไม่เป็นไปตามคำแนะนำของผู้ใช้ Dyson
- ใช้อุปกรณ์นอกเหนือจากวัตถุประสงค์การใช้งานภายในครัวเรือนตามปกติ
- ใช้อะไหล่ที่ไม่ได้ประกอบหรือติดตั้งตามคำแนะนำของ Dyson
- ใช้อะไหล่หรืออุปกรณ์เสริมที่ไม่ใช่ชิ้นส่วนของ Dyson
- การดัดแปลงผิดวิธี (ยกเว้นเมื่อ Dyson เป็นผู้ติดตั้ง)
- การซ่อมหรือการดัดแปลงโดยบุคคลอื่นนอกจาก Dyson หรือตัวแทนที่ได้รับอนุญาต
- การถอดชิ้น – โปรดอ่านคำแนะนำเกี่ยวกับ ‘การดูแลรักษาเครื่องของท่าน’ และภาพประกอบในคู่มือผู้ใช้ Dyson ของคุณเพื่ออ่านรายละเอียดเกี่ยวกับวิธีค้นหาและล้างสิ่งอุดตัน
- การสึกหรอและฉีกขาดตามปกติ (เช่น ฟิวส์ และอื่น ๆ)
- ระยะเวลาการใช้พลังงาน ของ แบตเตอรี่ ซึ่งลด ตาม อายุหรือสภาพการใช้งาน (ตามความเหมาะสม)

หากท่านมีข้อสงสัยเกี่ยวกับสิ่งที่ครอบคลุมการรับประกันของท่าน โปรดติดต่อ Dyson

สรุปสิ่งที่ครอบคลุม

- การรับประกันจะมีผลบังคับใช้นับจากวันที่ซื้อ (หรือวันที่ส่งมอบ หากส่งมอบหลังจากวันที่ซื้อ)
- ท่านจะต้องแสดงหลักฐาน (ทั้งต้นฉบับและหลักฐานอื่นที่สร้างขึ้นภายหลัง) เกี่ยวกับการส่ง/ซื้อสินค้า ก่อนที่อุปกรณ์ Dyson ของท่านจะได้รับการดำเนินการใด ๆ หากไม่มีหลักฐานดังกล่าว ท่านจะต้องเสียค่าใช้จ่ายในการดำเนินการต่าง ๆ โปรดเก็บใบเสร็จหรือใบส่งสินค้าไว้
- งานซ่อมทั้งหมดจะดำเนินการโดยเจ้าหน้าที่ของ Dyson หรือตัวแทนที่ได้รับอนุญาตแล้ว
- ชิ้นส่วนอะไหล่ที่ได้รับการเปลี่ยนจาก Dyson แล้ว จะตกเป็นทรัพย์สินของ Dyson
- การซ่อมหรือเปลี่ยนอุปกรณ์ Dyson ของท่านภายใต้การรับประกันนี้ จะไม่เป็นการขยายระยะเวลาประกัน
- การรับประกันเป็นการให้สิทธิประโยชน์เพิ่มเติม และไม่มีผลกระทบต่อสิทธิตามกฎหมายของท่านในฐานะผู้บริโภค

การป้องกันความเป็นส่วนตัวและข้อมูลความเป็นส่วนตัว

ท่านจะต้องให้ข้อมูลการติดต่อที่สามารถติดต่อได้ เมื่อท่านลงทะเบียนผลิตภัณฑ์ Dyson ของท่าน หรือ กับทางแอป MyDyson™ ของท่าน

เมื่อทำการลงทะเบียนผลิตภัณฑ์กับ Dyson ของท่าน

- ท่านจะต้องให้ข้อมูลการติดต่อที่สามารถติดต่อได้ เพื่อลงทะเบียนผลิตภัณฑ์ และช่วยให้เราสามารถสนับสนุนการรับประกันของท่าน

เมื่อท่านลงทะเบียนผ่านทางแอป MyDyson™

- คุณจะต้องให้ข้อมูลการติดต่อที่สามารถติดต่อได้ เพื่อลงทะเบียนแอป MyDyson™ สิ่งนี้จะทำให้เราเชื่อมโยงผลิตภัณฑ์ของท่านเข้ากับกรณิการใช้งานแอปของท่านได้อย่างปลอดภัย
- เมื่อท่านลงทะเบียน ท่านจะได้รับโอกาสที่จะเลือกรับหรือไม่รับการติดต่อสื่อสารจากทางเรา เมื่อท่านเลือกที่จะรับการติดต่อสื่อสารจาก Dyson เราจะทำการส่งรายละเอียดข้อเสนอพิเศษและข่าวเกี่ยวกับนวัตกรรมล่าสุดต่าง ๆ ของเราไปให้
- เราไม่เคยขายข้อมูลของท่านให้กับผู้อื่น และเราใช้ข้อมูลเพียงแค่ว่าท่านให้กับเรา ตามที่เรากำหนดไว้ในนโยบายความเป็นส่วนตัวของเรา ซึ่งสามารถเข้าไปดูได้ที่เว็บไซต์ของเราที่ privacy.dyson.com

VN HƯỚNG DẪN QUAN TRỌNG VỀ AN TOÀN ⚠ CẢNH BÁO

CẢ THIẾT BỊ VÀ ĐIỀU KHIỂN TỪ XA ĐỀU CHỨA NAM CHÂM.

1. Các thiết bị y tế cấy ghép như máy tạo nhịp tim và máy khử rung tim có thể bị ảnh hưởng bởi từ trường mạnh. Nếu bạn hoặc người thân trong gia đình có đeo thiết bị y tế cấy ghép hoặc máy khử rung tim, hãy tránh bỏ điều khiển từ xa vào túi hoặc gần thiết bị đó.
2. Thẻ tín dụng và phương tiện lưu trữ điện tử cũng có thể bị ảnh hưởng bởi nam châm, vì vậy nên để xa điều khiển từ xa và phần đầu thiết bị.

Để GIẢM NGUY CƠ HỎA HOẠN, ĐIỆN GIẬT HOẶC THƯƠNG TÍCH:

3. Một số bộ phận của thiết bị này có thể trở nên rất nóng và gây bỏng. Phải đặc biệt chú ý khi có trẻ em và những người dễ bị tổn thương.
4. Cá nhân (bao gồm trẻ em) có khuyết tật về thể chất, giác quan, thần kinh hay thiếu kinh nghiệm và kiến thức không được sử dụng thiết bị, trừ khi có sự giám sát hay chỉ dẫn của người có trách nhiệm đảm bảo an toàn cho họ. Trẻ em cần được giám sát để bảo đảm các em không chơi với máy.
5. Trẻ em từ 3 tuổi đến dưới 8 tuổi chỉ được bật/tắt thiết bị với điều kiện thiết bị đã được đặt hoặc lắp đặt ở vị trí hoạt động bình thường dự kiến và trẻ đã được giám sát hoặc hướng dẫn sử dụng thiết bị một cách an toàn và hiểu rõ các mối

nguy hiểm liên quan. Trẻ em từ 3 tuổi đến dưới 8 tuổi không được cắm điện, điều chỉnh và làm sạch thiết bị hoặc thực hiện việc bảo trì của người dùng. Trẻ em dưới 3 tuổi không được ở gần chỗ thiết bị trừ khi được giám sát liên tục.

6. Trẻ em dưới 3 tuổi không được ở gần chỗ thiết bị trừ khi được giám sát liên tục.
7. Thiết bị này không được đặt ngay bên dưới ổ cắm.
8. Không sử dụng thiết bị này trong môi trường ngay xung quanh bồn tắm, vòi hoa sen hoặc hồ bơi.
9. Không sử dụng thiết bị này nếu thiết bị đã bị rơi hoặc nếu thiết bị có dấu hiệu hư hỏng rõ ràng.
10. Luôn sử dụng thiết bị này trên bề mặt nằm ngang và ổn định.
11. Để tránh quá nóng, không che bọc thiết bị. 
12. Nếu dây cáp nguồn bị hư hỏng, vui lòng để nhà sản xuất, đại lý bảo trì của hãng hoặc những người có trình độ tương tự thay thế hoặc sửa chữa nhằm tránh nguy hiểm.
13. Không sử dụng thiết bị ở ngoài trời hoặc trên các bề mặt ẩm ướt và không dùng tay ướt cầm bất kỳ bộ phận nào của thiết bị hoặc phích cắm.
14. Đảm bảo thiết bị ở xa các chất lỏng dễ cháy, hơi nước, chất khử mùi không khí và tinh dầu.
15. Luôn cắm trực tiếp vào ổ cắm trên tường. Không bao giờ sử dụng với ổ cắm phụ vì quá tải có thể dẫn đến dây quá nóng và cháy.
16. Không sử dụng thiết bị này nếu thiết bị đã bị hư hỏng hoặc ngập trong nước.
17. Đảm bảo thiết bị này và dây cáp ở xa các bề mặt bị làm nóng. Không đặt dây cáp dưới đồ nội thất hoặc dưới các thiết bị khác.

18. Không đặt bất kỳ vật thể nào vào các khe hở vì hành động này có thể gây điện giật, hỏa hoạn hoặc làm hỏng thiết bị.
19. Luôn cầm thiết bị này ở phần đế, chứ không cầm ở vị trí vòng khuếch đại.
20. Nếu phích cắm không cắm được chặt vào ổ cắm hoặc phích cắm trở nên rất nóng, có thể cần phải thay ổ cắm. Tham khảo ý kiến của thợ điện có chuyên môn khi cần thay ổ cắm.
21. Không sử dụng thiết bị này trong phòng nhỏ khi trong phòng có những người không có khả năng tự rời khỏi phòng, trừ khi được giám sát liên tục.
22. Để giảm rủi ro hỏa hoạn, hãy để vải, rèm cửa hoặc bất kỳ vật liệu dễ cháy nào khác cách cửa thoát khí tối thiểu 1 mét.
23. Ngắt kết nối nguồn điện hoặc rút phích cắm trước khi vệ sinh, bảo trì hoặc thay bộ lọc. Luôn rút phích cắm thiết bị khi không sử dụng.
24. Thiết bị này chứa laser Loại 1. Việc sử dụng thiết bị ngoài ý muốn hoặc hư hại phần vỏ thiết bị có thể dẫn đến rò rỉ bức xạ laser nguy hiểm. Không nhìn vào nguồn ánh sáng. Bức xạ laser có thể gây hại cho mắt và da ngay cả với lượng nhỏ. Không cố gắng chỉnh sửa hoặc tháo rời bóng phát laser.
25. **CẢNH BÁO:** Mối nguy hiểm Bỏng Hóa chất và Nghẹt thở. Để pin ở xa trẻ em. Thiết bị này có chứa pin lithium cúc áo/đồng xu. Nếu ai đó nuốt phải hoặc để pin lithium cúc áo/đồng xu mới hoặc đã sử dụng đi vào cơ thể, pin có thể gây bỏng nặng bên trong cơ thể và dẫn đến tử vong chỉ trong vòng 2 giờ. Luôn đóng chặt ngăn chứa pin. Nếu ngăn chứa pin không đóng chặt,

hãy dừng sử dụng thiết bị, tháo pin và để xa trẻ em. Nếu bạn nghĩ rằng ai đó đã nuốt phải hoặc để pin lọt vào bất kỳ bộ phận nào của cơ thể, hãy đến cơ sở chăm sóc y tế ngay lập tức.

ĐỌC VÀ LƯU CÁC HƯỚNG DẪN NÀY

Thông tin bổ sung

Bảo trì thiết bị của bạn

- Để đảm bảo thiết bị luôn có được hiệu suất tốt nhất, điều quan trọng là phải thường xuyên vệ sinh và kiểm tra có tình trạng tắc nghẽn hay không.

Vệ sinh thiết bị của bạn

- Nếu bụi tích tụ trên bề mặt thiết bị, chỉ lau bụi khỏi vòng khuếch đại, lớp lưới lọc và các bộ phận khác bằng vải sạch, khô.
- Tìm kiếm các vị trí tắc nghẽn trong lỗ hút khí trên lớp lưới lọc và chỗ khẩu độ nhỏ bên trong vòng khuếch đại.
- Sử dụng bàn chải mềm để loại bỏ bụi và rác bẩn.
- Không sử dụng chất tẩy rửa hoặc chất đánh bóng để vệ sinh thiết bị.

Các bộ phận có thể thay thế

- Thiết bị của bạn có các bộ lọc và pin có thể thay thế, bất kỳ thao tác bảo trì nào khác cũng phải được thực hiện bởi đại lý bảo trì được ủy quyền.

Thay pin



Thận trọng

- Tháo vít ngăn chứa pin trên điều khiển từ xa. Nới lỏng đế và kéo để tháo pin.
- Không lắp ngược hoặc khiến pin bị đoản mạch.
- Không cố gắng tháo rời hoặc sạc pin. Để pin tránh xa lửa.
- Làm theo hướng dẫn của nhà sản xuất pin khi lắp pin mới (loại pin CR 2032).
- Luôn lắp vít lại vào điều khiển từ xa và tham khảo các mối nguy hiểm về pin trong phần cảnh báo.

Không cọ rửa bộ lọc

- Bộ lọc của bạn không thể được cọ rửa và không thể tái chế.
- Việc không thay thế bộ lọc của máy khi đến hạn có thể dẫn đến thay đổi hiệu suất và bề ngoài sản phẩm.
- Bạn có thể mua bộ lọc thay thế tại www.dyson.com hoặc thông qua ứng dụng MyDyson™.

Tự ngắt

- Vì an toàn của bạn, máy được trang bị công tắc tự ngắt sẽ hoạt động nếu máy bị lật nghiêng hoặc quá nóng. Nếu công tắc này hoạt động, hãy rút phích cắm của máy và để máy nguội lại. Trước khi khởi động lại máy, hãy kiểm tra và tháo gỡ mọi vị trí tắc nghẽn và đảm bảo máy để ở trên bề mặt chắc chắn.
- Ở chế độ sưởi ấm, máy sẽ tự động tắt sau chín giờ sử dụng liên tục. Để khởi động lại máy, nhấn nút bật/tắt Chế độ chờ trên điều khiển từ xa hoặc trên đế.

Thông tin Tái chế

- Sản phẩm của Dyson được làm từ các vật liệu có thể tái chế cao cấp. Tái chế nếu có thể.
- Vứt bỏ hoặc tái chế pin theo pháp lệnh hoặc quy định của địa phương.
- Để pin đã qua sử dụng ở xa trẻ em vì pin vẫn có thể gây hại nếu nuốt phải.
- Bộ lọc của bạn không thể được cọ rửa và không thể tái chế.
- Vứt bỏ bộ lọc đã hết tuổi thọ sử dụng theo pháp lệnh hoặc quy định của địa phương.
- Cần lấy pin ra khỏi thiết bị trước khi thải bỏ. Khi tháo pin, cần phải tắt nguồn thiết bị. Thải bỏ hoặc tái chế pin một cách an toàn theo pháp lệnh hoặc quy định của địa phương.

Bảo hành giới hạn 2 năm

Các điều khoản và điều kiện bảo hành giới hạn 2 năm của Dyson

Trường hợp đủ điều kiện bảo hành

- Việc sửa chữa hoặc thay thế máy Dyson của bạn (theo quyết định của Dyson) nếu phát hiện thấy máy bị khiếm khuyết do vật liệu, tay nghề hoặc chức năng bị lỗi trong vòng hai năm kể từ khi mua hoặc giao hàng (nếu bất kỳ bộ phận nào không còn có sẵn hoặc hết sản xuất, Dyson sẽ thay bằng bộ phận thay thế có cùng chức năng).
- Điều kiện bảo hành chỉ áp dụng nếu thiết bị được sử dụng trong phạm vi quốc gia nơi thiết bị được bán ra.

Các trường hợp không nằm trong danh mục bảo hành

- Bộ lọc thay thế. Các bộ lọc của thiết bị không được bảo hành.

Dyson không bảo hành cho việc sửa chữa hoặc thay thế thiết bị trong đó hỏng hóc là do:

- Hư hỏng gây ra bởi không thực hiện việc bảo trì thiết bị như được khuyến cáo.
- Hư hỏng do tai nạn, lỗi do sơ suất trong sử dụng hoặc bảo quản, lạm dụng, bỏ bê, vận hành hay thao tác máy bất cẩn, không theo Hướng dẫn sử dụng của Dyson.
- Sử dụng thiết bị cho bất cứ mục đích nào ngoài các mục đích gia dụng thông thường.
- Sử dụng các phụ kiện không được lắp ráp hoặc lắp đặt phù hợp với hướng dẫn của Dyson.
- Sử dụng các phụ tùng và phụ kiện không phải bộ phận chính hãng của Dyson.
- Lắp ráp hoặc cài đặt sai/lỗi (trừ trường hợp do Dyson thực hiện).
- Máy đã qua sửa chữa/thay đổi, và việc sửa chữa/thay đổi được thực hiện bởi các bên không phải Dyson hoặc đại lý được ủy quyền của Dyson.
- Tắc nghẽn – vui lòng tham khảo các hình minh họa và phần ‘Chăm sóc máy của bạn’ trong Hướng dẫn sử dụng Dyson để biết chi tiết về cách tìm và tháo gỡ các vị trí tắc nghẽn.
- Hao mòn thông thường (ví dụ: cầu chì, v.v.).
- Giảm thời gian xả pin do tuổi thọ pin hoặc do sử dụng (nếu có).

Nếu bạn chưa hiểu rõ về những quyền lợi trong bảo hành của mình, hãy liên hệ với Dyson.

Tóm tắt về bảo hành

- Bảo hành có hiệu lực từ ngày mua sản phẩm (hoặc ngày giao hàng nếu ngày này trễ hơn).
- Bạn cần cung cấp bằng chứng (cả bản gốc và bất kỳ giấy tờ liên quan nào) về việc giao hàng/ mua hàng trước khi có thể thực hiện bất kỳ dịch vụ bảo hành sửa chữa nào với máy Dyson. Thiếu các tài liệu này, mọi dịch vụ sửa chữa sẽ bị tính phí. Hãy giữ hóa đơn hoặc giấy giao hàng của bạn.
- Tất cả công việc bảo hành sẽ được Dyson hay đại lý được ủy quyền của hãng thực hiện.
- Bất kỳ phụ kiện nào do Dyson thay thế sẽ trở thành tài sản của Dyson.
- Việc sửa chữa hoặc thay thế máy Dyson trong thời hạn bảo hành sẽ không làm gia hạn thời hạn bảo hành.
- Bảo hành cung cấp các quyền lợi bổ sung và không ảnh hưởng đến các quyền lợi khác của khách hàng theo quy định của pháp luật.

Thông tin bảo vệ dữ liệu quan trọng

Bạn sẽ cần phải cung cấp cho chúng tôi thông tin liên lạc cơ bản khi đăng ký thiết bị Dyson hoặc ứng dụng MyDyson™.

Khi đăng ký máy Dyson:

- Bạn sẽ cần phải cung cấp cho chúng tôi thông tin liên lạc cơ bản để đăng ký máy và cho phép chúng tôi hỗ trợ bảo hành của bạn.

Khi đăng ký qua ứng dụng MyDyson™:

- Bạn sẽ cần cung cấp cho chúng tôi thông tin liên hệ cơ bản để đăng ký ứng dụng MyDyson™. Điều này cho phép chúng tôi liên kết an toàn máy của bạn với phiên bản ứng dụng.
- Khi đăng ký, bạn sẽ có cơ hội lựa chọn xem mình có muốn nhận thông tin trao đổi từ chúng tôi hay không. Nếu bạn chọn nhận thông tin trao đổi từ Dyson, chúng tôi sẽ gửi cho bạn chi tiết về các ưu đãi đặc biệt và tin tức về những cải tiến mới nhất của chúng tôi.
- Chúng tôi tuyệt đối không bán thông tin của bạn cho bên thứ ba và chỉ sử dụng thông tin mà bạn chia sẻ với chúng tôi như quy định trong chính sách quyền riêng tư của chúng tôi có trên trang web: [privacy.dyson.com](https://www.dyson.com/privacy).

ENAR IMPORTANT SAFETY INSTRUCTIONS

WARNING

THE APPLIANCE AND THE REMOTE CONTROL BOTH CONTAIN MAGNETS.

1. Implanted medical devices such as pacemakers and defibrillators may be affected by strong magnetic fields. If you or someone in your household has an implanted medical device or defibrillator, avoid placing the remote control in a pocket or near to the device.
2. Credit cards and electronic storage media may also be affected by magnets and should be kept away from the remote control and the top of the appliance.

TO REDUCE THE RISK OF FIRE,
ELECTRIC SHOCK, OR INJURY:

3. Some parts of this appliance can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
4. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
5. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that

it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.

6. Children of less than 3 years should be kept away unless continuously supervised.
7. This appliance must not be located immediately below a socket outlet.
8. Do not use this appliance in the immediate surroundings of a bath, a shower or a swimming pool.
9. Do not use this appliance if it has been dropped or if it has visible signs of damage.
10. Always use this appliance on a horizontal and stable surface.
11. To avoid overheating, do not cover the appliance. 
12. If the supply cable is damaged, it must be replaced or repaired by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
13. Do not use outdoors or on wet surfaces and do not handle any part of the appliance or plug with wet hands.
14. Keep the appliance away from flammable liquids, vapours, air fresheners and essential oils.
15. Always plug directly into a wall socket. Never use with an extension cable as overloading may result in the cable overheating and catching fire.
16. Do not use this appliance if it has been damaged or submerged in water.

17. Keep this appliance and cable away from heated surfaces. Do not position the cable under furniture or appliances.
18. Do not put any objects into any openings as this may cause an electric shock or fire or damage the appliance.
19. Always carry this appliance by the base and not by the loop amplifier.
20. If there is a loose fit between the plug and the socket or the plug becomes very hot, the socket may need to be replaced. Check with a qualified electrician to replace the socket.
21. Do not use this appliance in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
22. To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 metre from the air outlet.
23. Disconnect power or unplug before cleaning, performing any maintenance or replacing a filter. Always unplug the appliance when not in use.
24. This appliance contains a Class 1 laser. Unintended use of the appliance or damage to the housing may result in the escape of dangerous laser radiation. Do not stare at the light source. Laser radiation may, even in little doses, cause harm to the eyes and skin. Do not attempt to modify or disassemble the laser tube.
25. Chemical Burn and Choking Hazard. Keep batteries away from children. This product contains a lithium button/coin cell battery. If a new or used lithium button/coin cell

battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

READ AND SAVE THESE INSTRUCTIONS

Additional information

Maintaining your machine

- To always get the best performance from your machine, it's important to regularly clean it and check for blockages.

Cleaning your machine

- If dust accumulates on the surface of your machine, wipe dust from the loop amplifier, shrouds and other parts with a clean, dry cloth only.
- Look for blockages in the air inlet holes on the shroud and the small aperture inside the loop amplifier.
- Use a soft brush to remove dust and debris.
- Don't use detergents or polishes to clean your machine.

Replaceable parts

- Your machine has replaceable filter units and batteries, any other servicing must be carried out by an authorised service representative.

Battery replacement



Caution

- Unscrew the battery compartment on the remote control. Loosen the base and pull to remove the battery.
- Do not install backwards or short circuit the batteries.
- Do not attempt to dismantle or charge the batteries. Keep away from fire.
- Follow battery manufacturers' instructions when installing new batteries (battery type CR 2032).
- Always replace the screw in the remote control and refer to the battery hazard in the warning section.

Non-washable filter units

- Your filter units are non-washable and non-recyclable.
- Failure to replace your filter units when prompted may result in changes to product performance and appearance.
- Replacement filter units can be purchased at www.sa.dyson.com/support (SA) or www.dyson.ae/support (UAE) or via the MyDyson™ app.

Automatic cut-out

- For your safety, your machine is fitted with automatic cut-out switches that operate if the machine tips over or overheats. If the switches operate, unplug your machine and allow it to cool. Before restarting your machine, check and clear any blockages and ensure that your machine is on a solid level surface.
- In heating mode, your machine will automatically switch off after nine hours of continuous use. To restart your machine, press the Standby on/off button on either the remote control or the base.

Disposal information

- Dyson products are made from high grade recyclable materials. Recycle where possible.
- Dispose of or recycle the battery in accordance with local ordinances or regulations.
- Keep the used batteries away from children as these can still harm children if swallowed.
- Your filter units are non-washable and non-recyclable.
- Dispose of the exhausted filter unit(s) in accordance with local ordinances or regulations.
- The battery should be removed from the machine before disposal.

Limited 2-year guarantee

Terms and conditions of the Dyson 2-year limited guarantee

What is covered

- The repair or replacement of your Dyson appliance (at Dyson's discretion) if it is found to be defective due to faulty materials, workmanship or function within 2 years of purchase or delivery (if any part is no longer available or out of manufacture Dyson will replace it with a functional replacement part).
- Where this machine is sold outside of the EU, this warranty will only be valid if the appliance is used in the country in which it was sold.

What is not covered

- Replacement filter units. The appliance's filter units are not covered by the guarantee.

Dyson does not guarantee the repair or replacement of a product where a defect is the result of:

- Damage caused by not carrying out the recommended appliance maintenance.
- Accidental damage, faults caused by negligent use or care, misuse, neglect, careless operation or handling of the appliance which is not in accordance with the Dyson User Manual.
- Use of the appliance for anything other than normal domestic household purposes.
- Use of parts not assembled or installed in accordance with the instructions of Dyson.
- Use of parts and accessories which are not genuine Dyson components.
- Faulty installation (except where installed by Dyson).
- Repairs or alterations carried out by parties other than Dyson or its authorised agents.
- Blockages – Please refer to the 'Looking after your machine' section and illustrations in this Dyson Operating Manual for details of how to look for and clear blockages.
- Normal wear and tear (e.g. fuse etc.).
- Reduction in battery discharge time due to battery age or use (where applicable).

If you are in any doubt as to what is covered by your guarantee, please contact the Dyson Helpline.

Summary of cover

- The guarantee becomes effective from the date of purchase (or the date of delivery if this is later).
- You must provide proof of (both the original and any subsequent) delivery/purchase before any work can be carried out on your Dyson machine. Without this proof, any work carried out will be chargeable. Keep your receipt or delivery note.
- All work will be carried out by Dyson or its authorised agents.
- Any parts which are replaced by Dyson will become the property of Dyson.
- The repair or replacement of your Dyson machine under guarantee will not extend the period of guarantee.
- The guarantee provides benefits which are additional to and do not affect your statutory rights as a consumer.

Important data protection information

When registering your Dyson machine:

- You will need to provide us with basic contact information to register your machine and enable us to support your guarantee.
- When you register, you will have the opportunity to choose whether you would like to receive communications from us. If you opt-in to communications from Dyson, we will send you details of special offers and news of our latest innovations.
- We never sell your information to third parties and only use information that you share with us as defined by our privacy policies which are available on our website [privacy.dyson.com](https://www.dyson.com/privacy).

إذا كانت لديك أي شكوك حول ما يغطيه الضمان، يُرجى الاتصال بخط المساعدة التابع لشركة Dyson.

ملخص تغطية الضمان

- يصبح الضمان ساريًا من تاريخ الشراء (أو تاريخ التسليم إذا كان هذا التاريخ لاحقًا).
- يجب عليك تقديم ما يثبت (سواء الجهاز الأصلي أو أي من ملحقاته التي اشتريتها بعد ذلك) عملية التسليم/الشراء قبل تنفيذ أي أعمال على جهاز Dyson. وبدون هذا الإثبات، ستتحمل دفع نفقات أي أعمال يتم إجراؤها. ويجب عليك الاحتفاظ بقسيمة الشراء أو إشعار التسليم.
- سيتم تنفيذ كافة الأعمال بمعرفة شركة Dyson أو أي من وكلائها المعتمدين.
- أي أجزاء يتم استبدالها بمعرفة Dyson تصبح ملك لشركة Dyson.
- إن إصلاح جهاز Dyson أو استبداله وهو لا يزال في فترة الضمان لن يمد فترة الضمان.
- يوفر الضمان مزايا مضافة إلى المنتج ولا يؤثر في أي حقوق قانونية قد تتمتع بها كمستهلك.

معلومات مهمة حول حماية البيانات

عند تسجيل منتج Dyson الخاص بك:

- ستحتاج إلى تزويدنا بمعلومات الاتصال الأساسية لتسجيل منتجك وتمكيننا من دعم الضمان الخاص بك.
- عند التسجيل، سيكون لديك الفرصة لاختيار تلقي رسائل منا أم لا. إذا وافقت على تلقي رسائل من Dyson، فسنرسل لك تفاصيل العروض الخاصة والأخبار المتعلقة بأحدث الابتكارات لدينا.
- نحن لا نبيع مطلقًا معلوماتك إلى جهات أخرى كما أننا نستخدم المعلومات فقط التي تشاركها معنا على النحو الذي تحدده سياسات الخصوصية لدينا المتوفرة على موقع الويب الخاص بنا privacy.dyson.com

معلومات إضافية

صيانة جهازك

- للحصول دائمًا على أفضل أداء من جهازك، فإنه من المهم تنظيفه بانتظام والتحقق من عدم وجود انسدادات.

تنظيف جهازك

- إذا تراكم الغبار على سطح جهازك، فامسح الغبار عن المضخم الحلقي، والأغطية، والأجزاء الأخرى باستخدام قطعة قماش نظيفة وجافة فقط.
- ابحث عن أي انسدادات في فتحات دخول الهواء الموجودة بالغطاء وفي الفتحة الصغيرة الموجودة داخل المضخم الحلقي.
- استخدم فرشاة ناعمة لإزالة الغبار والرواسب.
- لا تستخدم المواد المنظفة أو الملمعة لتنظيف الجهاز.

الأجزاء القابلة للاستبدال

- يحتوي جهازك على وحدات مرشح وبطاريات قابلة للاستبدال، ويجب إجراء أي صيانة أخرى بواسطة فممثل خدمة معتمد.

استبدال البطارية



تنبيه

- قم بفك حجرة بطارية وحدة التحكم عن بُعد، ثم فك القاعدة واسحب لإخراج البطارية
- لا تدخل البطاريات بشكل عكسي ولا تقم بتشغيل البطاريات على دائرة كهربائية قصيرة.
- لا تحاول فك البطاريات أو شحنها، واحرص على إبعادها عن النيران.
- اتبع إرشادات الشركة المصنعة للبطارية عند تركيب بطاريات جديدة (نوع البطارية CR 2032).
- استبدل دائمًا البرغي في وحدة التحكم عن بُعد وراجع مخاطر البطارية في قسم التحذير.

وحدات المرشح غير القابلة للغسل

- وحدات الفلاتر الخاصة بك غير قابلة للغسل وغير قابلة لإعادة التدوير.
- قد ينتج عن عدم استبدال وحدات المرشح الخاصة بك عند المطالبة بذلك حدوث تغيرات في أداء الجهاز ومظهره.
- يمكن شراء وحدات المرشح البديلة من www.sa.dyson.com/support (بالنسبة للمملكة العربية السعودية) أو www.dyson.ae/support (بالنسبة للإمارات العربية المتحدة).

إيقاف التشغيل التلقائي

- من أجل سلامتك، تم تزويد جهازك بمفاتيح تلقائية لقطع التيار والتي تعمل عند تعرض الجهاز للانعكاس أو السخونة الزائدة. وفي حال عمل هذه المفاتيح، افصل جهازك عن الكهرباء واتركه حتى يبرد. وقبل إعادة تشغيل جهازك، افحصه ونظف أي انسدادات وتأكد أن جهازك موضوع على سطح مستو وصلب.
- في وضع التدفئة، سيتحول الجهاز إلى وضع "إيقاف التشغيل" تلقائيًا بعد 9 ساعات من الاستخدام المتواصل. لإعادة تشغيل الجهاز، اضغط على زر "تشغيل/إيقاف تشغيل وضع الاستعداد" على جهاز التحكم عن بُعد أو القاعدة.

معلومات التخلص من الجهاز

- منتجات Dyson مصنوعة من مواد عالية الجودة قابلة لإعادة التدوير. لذلك عليك بإعادة تدويرها كلما كان ذلك ممكنًا.
- يتم التخلص من البطارية أو إعادة تدويرها وفقًا للقوانين أو اللوائح المحلية.
- احفظ البطاريات المستعملة بعيداً عن متناول الأطفال، حيث قد تتسبب في إلحاق الضرر بالأطفال في حال ابتلاعها.
- وحدات الفلاتر الخاصة بك غير قابلة للغسل وغير قابلة لإعادة التدوير.
- يتم التخلص من وحدات الفلاتر منتهية الصلاحية وفقًا للقوانين أو اللوائح المحلية.

ضمان محدود لمدة عامين

شروط وأحكام ضمان Dyson المحدود لمدة عامين

البند المشمولة بالضمان

- يتم إصلاح جهاز Dyson أو استبداله (وفقًا لتقدير شركة Dyson) إذا تبين أن الجهاز معيب نتيجة وجود خلل في المواد أو المصنعية أو الوظائف خلال عامين من تاريخ الشراء أو التسليم (إذا لم يعد أي جزء متوفرًا أو لم يعد يتم تصنيعه، فتلزم شركة Dyson باستبداله بقطع غيار سليمة).
- في حالة بيع هذا الجهاز خارج الاتحاد الأوروبي، سيكون هذا الضمان ساريًا إذا تم استخدام الجهاز في البلد الذي أتباع فيه.

البند غير المشمول بالضمان

- وحدات المرشح القابلة للاستبدال. إن وحدات مرشح الجهاز غير مشمولة بالضمان.
- لا تضمن شركة Dyson إصلاح المنتج أو استبداله إذا كان العطل نتيجة لما يلي:
- التلف الناتج عن عدم تنفيذ الصيانة الموصى بها لالة.
- التلف العرضي والأعطال الناجمة عن الاستخدام أو الرعاية المهملة للجهاز أو إساءة استخدام الجهاز أو إهماله أو تشغيل الجهاز أو التعامل معه بإهمال مما يخالف دليل مستخدم Dyson.
- استخدام الجهاز لأي شيء بخلاف الأغراض المنزلية العادية.
- استخدام أجزاء لم يتم تجميعها أو تركيبها وفقًا لتعليمات Dyson.
- استخدام أجزاء وملحقات ليست من المكونات الأصلية التابعة لشركة Dyson.
- التركيب الخاطئ لمكونات الجهاز (إلا إذا تم تركيبه بواسطة Dyson).
- تنفيذ الإصلاحات والتبديلات بواسطة أطراف أخرى غير Dyson أو أي من وكلائها المعتمدين.
- يرجى الرجوع إلى قسم "العناية والصيانة" والرسوم التوضيحية في دليل التشغيل من دايسون للحصول على تفاصيل كيفية البحث عن الإسدادات وإزالتها.
- البلى والتآكل المعتاد (مثل قاطع التيار وما إلى ذلك).
- انخفاض في وقت تفريغ البطارية بسبب عمر البطارية أو استخدامها (حيثما ينطبق).

20. إذا كان التركيب سائبًا بين القابس والمقبس أو إن أصبح القابس ساخنًا للغاية، فقد يحتاج المقبس إلى استبداله. تحققى بالاستعانة بكهربائي مؤهل لاستبدال المقبس.
21. لا تستخدمى هذا الجهاز في غرف صغيرة بها أشخاص غير قادرين على مغادرة الغرفة بمفردهم، ما لم يتم توفير الإشراف المستمر.
22. للحد من مخاطر نشوب حريق، احرصى على إبعاد المنسوجات أو الستائر أو أي مواد أخرى قابلة للاشتعال على مسافة لا تقل عن متر واحد من مخرج الهواء.
23. افصل الطاقة أو انزع المقبس قبل التنظيف أو إجراء أي صيانة أو استبدال مرشح. احرص دائمًا على فصل الجهاز من الكهرباء عند عدم استخدامه.
24. يحتوي هذا الجهاز على ليزر من الفئة 1. قد يؤدي الاستخدام غير المقصود للجهاز أو تلف المبيت إلى تسرب إشعاع الليزر الخطير. لا تحقق في مصدر الضوء. قد يؤدي إشعاع الليزر إلى الإضرار بالعينين والجلد، حتى إذا كان بجرعات قليلة. لا تحاول تعديل أنبوب الليزر أو فكّه.
25. خطر التعرض لحرق كيميائي أو الاختناق. احرصى على إبعاد البطاريات عن متناول الأطفال. يحتوي هذا المنتج على بطارية ليثيوم خلوية دائرية الشكل. في حال ابتلاع بطارية ليثيوم خلوية دائرية الشكل جديدة أو مستعملة أو دخولها إلى الجسم، فإنها قد تتسبب بحروق داخلية وقد تؤدي إلى الوفاة في أقل من ساعتين. احرصى دائمًا على إحكام غلق حجرة البطارية. إذا لم يتم غلق حجرة البطارية بإحكام، توقف عن استخدام المنتج وقم بإزالة البطاريات واحفظها بعيداً عن متناول الأطفال. إذا كنت تشك في ابتلاع البطاريات أو دخولها في أي جزء من أجزاء الجسم، فاستشيرى الطبيب على الفور.

يجب قراءة هذه
الإرشادات والاحتفاظ بها

- تتراوح أعمارهم بين 3 سنوات وأقل من 8 سنوات توصيل الجهاز بالمقبس أو ضبطه أو تنظيفه أو إجراء الصيانة التي يقوم بها المستخدم.
6. يلزم إبقاء الأطفال الذين تقل أعمارهم عن 3 سنوات بعيدًا عن الجهاز ما لم يكن هناك إشراف مستمر.
7. يجب عدم وضع هذا الجهاز أسفل مأخذ المقبس مباشرةً.
8. لا تستخدم هذا الجهاز في المحيط القريب من حمام أو دش أو حوض سباحة.
9. لا تستخدم هذا الجهاز في حال سقوطه أو إذا كانت به علامات واضحة على التلف.
10. استخدم هذا الجهاز دائمًا على سطح أفقي وثابت.
11. لتجنب ارتفاع درجة الحرارة، يحظر  تغطية الجهاز.
12. إذا كان هناك تلف في كابل الكهرباء، فيجب استبداله أو إصلاحه بمعرفة الشركة المصنعة أو وكيل الصيانة التابع لها أو أي شخص يتمتع بدرجة مشابهة من التأهيل، لتجنب التعرض لأي خطر.
13. لا تستخدم الجهاز في الهواء الطلق أو على أسطح رطبة أو تلمسي أي جزء من الجهاز أو توصليه بالمقبس بأيدي مبللة.
14. أبقِ الجهاز بعيدًا عن السوائل والأبخرة ومعطرات الهواء والزيوت العطرية القابلة للاشتعال.
15. قومي بتوصيله دائمًا بمقبس الحائط مباشرةً. لا تستخدمه مع كابل تطويل، حيث إن زيادة التحميل قد تؤدي إلى زيادة سخونة الكابل واشتعاله.
16. لا تستخدم هذا الجهاز في حال تلفه أو غمره بالماء.
17. احتفظي بالجهاز والكابل بعيدًا عن الأسطح الساخنة. لا تضعي الكابل أسفل الأثاث أو الأجهزة.
18. لا تضع أي جسم في أي فتحة إذ إن هذا قد يؤدي إلى حدوث صدمة كهربائية أو نشوب حريق أو تلف الجهاز.
19. احرصي دائمًا على حمل هذا الجهاز من القاعدة وليس من المضخم الحلق.

إرشادات هامة

⚠ تحذير

يحتوي الجهاز وأداة التحكم عن بُعد على مغناطيس.

1. قد تتأثر الأجهزة الطبية المزروعة مثل ناظمات القلب وأجهزة صدمات القلب الكهربائية بالمجالات المغناطيسية القوية. إذا كنت تستخدم أنت أو أحد أفراد أسرتك جهازًا طبيًا مزروعًا أو جهاز صدمات القلب الكهربائية، فتجنب وضع جهاز التحكم عن بُعد في جيبك أو بالقرب من الجهاز.
2. قد تتأثر أيضاً بطاقات الائتمان ووسائل التخزين الإلكترونية بالمواد المغناطيسية، ولذا ينبغي حفظها بعيداً عن وحدة التحكم عن بُعد وأعلى الجهاز.

لتجنب مخاطر الحريق أو الصدمة الكهربائية أو الإصابة:

3. قد تصبح بعض أجزاء هذا الجهاز ساخنة جدًا وتسبب الحروق. يجب إيلاء اهتمام خاص بأماكن وجود الأطفال والضعفاء.
4. هذا الجهاز غير مُخصص للاستخدام من جانب أشخاص (من بينهم الأطفال) من ذوي القدرات البدنية أو الحسية أو العقلية المحدودة، أو يفتقرون إلى الخبرة والمعرفة، ما لم يُقدم لهم الإشراف أو التوجيه بشأن استخدام الجهاز من جانب شخص مسؤول عن سلامتهم. ينبغي مراقبة الأطفال لضمان عدم عبثهم بالجهاز.
5. يُسمح للأطفال الذين تتراوح أعمارهم بين 3 سنوات وأقل من 8 سنوات بـ "تشغيل/إيقاف تشغيل" الجهاز بشرط وضعه أو تثبيته في وضع التشغيل الطبيعي المخصص، بجانب الإشراف عليهم أو توجيههم حول استخدام الجهاز بطريقة آمنة وفهم المخاطر المنطوي عليها. لا يجوز للأطفال الذين

