

Regulatory compliance and
safety information
Thank you for choosing to buy
a Dyson purifying fan heater

This product is only suitable for well insulated
spaces or occasional use.

HP07 / HP09
HP07 YY / HP09 YY
HP07 ZZ / HP09 ZZ

IMPORTANT SAFETY INSTRUCTIONS


WARNING

THE APPLIANCE AND THE REMOTE CONTROL BOTH CONTAIN MAGNETS.

1. Implanted medical devices such as pacemakers and defibrillators may be affected by strong magnetic fields. If you or someone in your household has an implanted medical device or defibrillator, avoid placing the remote control in a pocket or near to the device.
2. Credit cards and electronic storage media may also be affected by magnets and should be kept away from the remote control and the top of the appliance.

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

3. Some parts of this appliance can become very hot and cause burns. Particular attention has to be given where children and vulnerable people are present.
4. This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or reasoning capabilities, or lack of experience and knowledge, only if they have been given supervision or instruction by a responsible person concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
5. Children aged from 3 years and less than 8 years shall only switch on/off the appliance provided that it has been placed or installed in its intended normal operating position and they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children aged from 3 years and less than 8 years shall not plug in, regulate and clean the appliance or perform user maintenance.
6. Children of less than 3 years should be kept away unless continuously supervised.
7. This appliance must not be located immediately below a socket outlet.

8. Do not use or store this appliance in the immediate surroundings of a bath, shower or swimming pool.
9. Do not use this appliance if it has been dropped or if it has visible signs of damage.
10. Always use this appliance on a horizontal and stable surface.
-  11. To avoid overheating, do not cover the appliance.
12. If the supply cable is damaged, it must be replaced or repaired by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
13. Do not use outdoors or on wet surfaces and do not handle any part of the appliance or plug with wet hands.
14. Keep the appliance away from flammable liquids, vapours, air fresheners and essential oils.
15. Always plug directly into a wall socket. Never use with an extension cable as overloading may result in the cable overheating and catching fire.
16. Do not use this appliance if it has been damaged or submerged in water.
17. Keep this appliance and cable away from heated surfaces. Do not position the cable under furniture or appliances.
18. Do not put any objects into any openings as this may cause an electric shock or fire or damage the appliance.
19. Always carry this appliance by the base and not by the loop amplifier.
20. If there is a loose fit between the plug and the socket or the plug becomes very hot, the socket may need to be replaced. Check with a qualified electrician to replace the socket.
21. Do not use this appliance in small rooms when they are occupied by persons not capable of leaving the room on their own, unless constant supervision is provided.
22. To reduce the risk of fire, keep textiles, curtains, or any other flammable material a minimum distance of 1 metre from the air outlet.
23. Disconnect power or unplug before cleaning, performing any maintenance or replacing a filter. Always unplug the appliance when not in use.
24. This appliance contains a Class 1 laser. Unintended use of the appliance or damage to the housing may result in the

escape of dangerous laser radiation. Do not stare at the light source. Laser radiation may, even in little doses, cause harm to the eyes and skin. Do not attempt to modify or disassemble the laser tube.

25. **Chemical Burn and Choking Hazard.** Keep batteries away from children. This product contains a lithium button/coin cell battery. If a new or used lithium button/coin cell battery is swallowed or enters the body, it can cause severe internal burns and can lead to death in as little as 2 hours. Always completely secure the battery compartment. If the battery compartment does not close securely, stop using the product, remove the batteries, and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

READ AND SAVE THESE INSTRUCTIONS

Additional information

Control without the remote

- Your machine can be controlled through the MyDyson™ app.

Maintaining your machine

- To always get the best performance from your machine, it's important to regularly clean it and check for blockages.

Cleaning your machine

- If dust accumulates on the surface of your machine, wipe dust from the loop amplifier, shrouds and other parts with a clean, dry cloth only.
- Look for blockages in the air inlet holes on the shroud and the small aperture inside the loop amplifier.
- Use a soft brush to remove dust and debris.
- Don't use detergents or polishes to clean your machine.

Replaceable parts

- Your machine has replaceable filter units and batteries, any other servicing must be carried out by an authorised service representative.

Battery replacement



Caution

- Unscrew the battery compartment on the remote control. Loosen the base and pull to remove the battery.
- Do not install backwards or short circuit the batteries.
- Do not attempt to dismantle or charge the batteries. Keep away from fire.
- Follow battery manufacturers' instructions when installing new batteries (battery type CR 2032).
- Always replace the screw in the remote control and refer to the battery hazard in the warning section.

Non-washable filter units

- Your filter units are non-washable and non-recyclable.
- Failure to replace your filter units when prompted may result in changes to product performance and appearance.
- Replacement filter units can be purchased at www.dyson.com or via the MyDyson™ app.

Auto mode

- A period of six days is required after your machine is first used for the sensor to calibrate. During this period, your machine may be more sensitive to VOCs (such as odors) than normal.
- During first use, whilst the sensors calibrate, your machine can take up to two minutes to show VOC and NO₂ data.

Automatic cut-out

- For your safety, your machine is fitted with automatic cut-out switches that operate if the machine tips over or overheats. If the switches operate, unplug your machine and allow it to cool. Before restarting your machine, check and clear any blockages and ensure that your machine is on a solid level surface.
- In heating mode, your machine will automatically switch off after nine hours of continuous use. To restart your machine, press the Standby on/off button on either the remote control or the base.

MyDyson™ app connectivity

- You must have a live internet connection in order for the MyDyson™ app to work.
- Your machine can connect to either 2.4GHz or 5GHz networks which includes most modern routers. Check your router documentation for compatibility.
- Dyson endeavours to ensure that our technology is compatible with current operating systems, but this is not guaranteed. If you have any questions or would like to check the latest compatibility, please contact the Dyson Helpline.
- Your mobile device must have Bluetooth® wireless technology 4.0 support (Bluetooth® wireless technology Low Energy) in order to set up a connection with the machine. Check your device specification for compatibility.
- BLE/Wi-Fi 2.4GHz
- Wi-Fi 5GHz
- Networked standby: 0.9W

Conformity information

- Hereby, Dyson declares that this environmental control radio equipment is in compliance with Directive 2014/53/EU.
- The full text of the EU Declaration of Conformity is available at the following internet address:
- www.dyson.co.uk/inside-dyson/terms/compliance (GB)
- www.dyson.ie/inside-dyson/terms/compliance (IE)
- Bluetooth 2.4GHz, 0.02W max

Disposal information

- Dyson products are made from high grade recyclable materials. Recycle where possible.
- Dispose of or recycle the battery in accordance with local ordinances or regulations.



This symbol indicates that this machine should not be disposed with your general household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. When this machine has reached the end of its serviceable life, please take it to a recognised WEEE (Waste Electrical and Electronic Equipment) collection facility such as your local civic amenity site for recycling. Your local authority or retailer will be able to advise you of your nearest recycling facility.

- Keep the used batteries away from children as these can still harm children if swallowed.
- Your filter units are non-washable and non-recyclable.
- Dispose of the exhausted filter unit(s) in accordance with local ordinances or regulations.
- The battery should be removed from the machine before disposal.

Limited 2-year guarantee

Terms and conditions of the Dyson 2-year limited guarantee are set out below. The name, address details of the Dyson guarantor for your country are set out in this document – please refer to the table on the back page for full details.

What is covered

- The repair or replacement of your Dyson machine (at Dyson's discretion) if it is found to be defective due to faulty materials, workmanship or function within two years of purchase or delivery (if any part is no longer available or out of manufacture, Dyson will replace it with a functional replacement part).

What is not covered

- Replacement filter units. The machine's filter units are not covered by the guarantee.

Dyson does not guarantee the repair or replacement of a product where a defect is the result of:

- Damage caused by not carrying out the recommended machine maintenance.
- Accidental damage, faults caused by negligent use or care, misuse, neglect, carelessness or operation or handling of the machine which is not in accordance with the Dyson User manual.
- Use of the machine for anything other than normal domestic household purposes.
- Use of parts not assembled or installed in accordance with the instructions of Dyson.
- Use of parts and accessories which are not genuine Dyson components.
- Faulty installation (except where installed by Dyson).

- Repairs or alterations carried out by parties other than Dyson or its authorised agents.
- Blockages – Refer to the Dyson User manual for details on how to look for and clear blockages.
- Normal wear and tear (e.g. fuse etc.).
- Reduction in battery discharge time due to battery age or use (where applicable).

If you are in any doubt as to what is covered by your guarantee, please contact the Dyson Helpline.

Summary of cover

- The guarantee becomes effective from the date of purchase (or the date of delivery if this is later).
- You must provide proof of (both the original and any subsequent) delivery/purchase before any work can be carried out on your Dyson machine. Without this proof, any work carried out will be chargeable. Keep your receipt or delivery note.
- All work will be carried out by Dyson or its authorised agents.
- Any parts which are replaced by Dyson will become the property of Dyson.
- The repair or replacement of your Dyson machine under guarantee will not extend the period of guarantee unless this is required by local law in the country of purchase.
- The guarantee provides benefits which are additional to and do not affect your statutory rights as a consumer and will apply whether you purchased your product directly from Dyson or from a third party.

Important data protection information

You will need to provide us with basic contact information when you register your Dyson machine or via the MyDyson™ app.

When registering your Dyson machine:

- You will need to provide us with basic contact information to register your machine and enable us to support your guarantee.

When registering via the MyDyson™ app:

- You will need to provide us with basic contact information to register the MyDyson™ app. This enables us to securely link your machine to your instance of the app.
- When you register, you will have the opportunity to choose whether you would like to receive communications from us. If you opt-in to communications from Dyson, we will send you details of special offers and news of our latest innovations.
- We never sell your information to third parties and only use information that you share with us as defined by our privacy policies which are available on our website at privacy.dyson.com.

Model Identifier: HP07 / HP09
 HP07 YY / HP09 YY
 HP07 ZZ / HP09 ZZ

Item	Symbol	Value	Unit
Heat output			
Nominal heat output*	P_{nom}	2.250 2.050*	kW
Minimum heat output (indicative)	P_{min}	2.250 2.050*	kW
Maximum continuous heat output*	$P_{max,c}$	2.250 2.050*	kW
Auxiliary electricity consumption			
At nominal heat output*	el_{max}	0.000	kW
At minimum heat output	el_{min}	0.000	kW
In standby mode	el_{SB}	0.0005	kW
Contact details			
Dyson Technology Limited Tetbury Hill Malmesbury Wiltshire SN16 0RP United Kingdom			
*Value in parenthesis applies to Swiss variant only.			

	Item	Unit
	Type of heat output/room temperature control	
	single stage heat output and no room temperature control	<i>no</i>
	two or more manual stages, no room temperature control	<i>no</i>
	with mechanic thermostat room temperature control	<i>no</i>
	with electronic room temperature control	<i>yes</i>
	electronic room temperature control plus day timer	<i>no</i>
	electronic room temperature control plus week timer	<i>no</i>
	Other control options	
	room temperature control, with presence detection	<i>no</i>
	room temperature control, with open window detection	<i>no</i>
	with distance control option	<i>no</i>
	with adaptive start control	<i>no</i>
	with working time limitation	<i>yes</i>
	with black bulb sensor	<i>no</i>

The Bluetooth® word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by Dyson is under license.

Apple and the Apple logo are trademarks of Apple Inc., registered in the U.S. and other countries. App Store is a service mark of Apple Inc., registered in the U.S. and other countries. Google Play and the Google Play logo are trademarks of Google Inc.