

Regulatory compliance  
and safety information

الامتثال التنظيمي ومعلومات السلامة

HS05

EN

# IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

When using an electrical appliance, basic precautions should always be followed, including the following:

## WARNING

THE APPLIANCE AND ATTACHMENTS CONTAIN MAGNETS.

1. Keep away from implanted medical devices such as pacemakers and defibrillators as they may be affected by strong magnetic fields. Can also affect credit cards and electronic storage media.

## WARNING

THESE WARNINGS APPLY TO THE APPLIANCE, AND ALSO WHERE APPLICABLE, TO ALL TOOLS, ACCESSORIES, CHARGERS OR MAINS ADAPTORS.

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

2. This Dyson appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or reasoning capabilities, or lack of experience and knowledge, only if they have been given supervision or instruction by a responsible person concerning use of the appliance in a safe way and understand the

hazards involved. Cleaning and user maintenance shall not be made by children without supervision.


3. Do not allow to be used as a toy. Close attention is necessary when used by or near children. Children should be supervised to ensure that they do not play with the appliance.
4. If the appliance is used in a bathroom, unplug after use. The proximity of water presents a hazard even when the appliance is switched off.



5. **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
6. If the supply cable is damaged, it must be replaced or repaired by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
7. This appliance has a non-self-resetting thermal cut-out safety device to prevent overheating. If your appliance cuts out, unplug it from the mains supply socket and leave to cool.
8. **CAUTION:** In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility company, or plugged into any socket where the electrical supply is unstable or likely to be turned off.
9. For additional protection, the installation of a residual current device (RCD) having a rated

residual operating current not exceeding 30mA is advisable. Ask your installer for advice.

10. Do not use the appliance for any other purpose than styling hair.
11. Do not handle any part of the plug or appliance with wet hands.
12. Do not unplug by pulling on the cable or stretch or pull the cable when in use. Do not use an extension lead and do not wrap the cable around the appliance.
13. Do not use any lubricants, cleaning agents, polishes or air fresheners on any part of the appliance.
14. Contact the Dyson Helpline when a service or repair is required. Do not disassemble the appliance as incorrect reassembly may result in an electric shock or fire.
15. If the appliance is not working as it should, if it has received a sharp blow, if it has been dropped, damaged, left outdoors, or dropped into water, do not use and contact the Dyson Helpline.
16. The appliance can be used without an attachment. For best results, the appliance should be used with the recommended attachments.

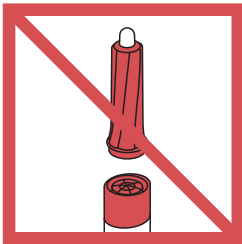

The attachments and product air exit area may become hot during use. Allow them to cool before handling.

## Additional information

### Looking after your Dyson machine

- Do not carry out any maintenance or repair work other than that shown in the Dyson user manual, or advised by the Dyson Helpline.
- Always disconnect the plug from the mains socket before inspecting for problems. If the machine will not operate, first check the mains socket has an electricity supply and that the plug is properly inserted into the socket.

### Disposal information

- Dyson products are made from high grade recyclable materials. Recycle where possible.



This symbol indicates that this machine should not be disposed with your general household waste. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. When this machine has reached the end of its serviceable life, please take it to a recognised WEEE (Waste Electrical and Electronic Equipment) collection facility such as your local civic amenity site for recycling. Your local authority or retailer will be able to advise you of your nearest recycling facility.

### Limited 2-year guarantee

Terms and conditions of the Dyson 2-year limited guarantee

#### What is covered

- The repair or replacement of your Dyson machine (at Dyson's discretion) if it is found to be defective due to faulty materials, workmanship or function within two years of purchase or delivery (if any part is no longer available or out of manufacture, Dyson will replace it with a functional replacement part).
- Where this machine is sold outside of the EU, this guarantee will only be valid if the machine is used in the country in which it was sold.
- Where this machine is sold within the EU, this guarantee will only be valid (i) if the machine is used in the country in which it was sold or (ii) if the machine is used in Austria, Belgium, Denmark, Finland, France, Germany, Ireland, Italy, Netherlands, Norway, Poland, Spain, Sweden, Switzerland or the United Kingdom and the same model as this machine is sold at the same voltage rating in the relevant country.

#### What is not covered

Dyson does not guarantee the repair or replacement of a product where a defect is the result of:

- Damage caused by not carrying out the recommended machine maintenance.
- Accidental damage, faults caused by negligent use or care, misuse, neglect, carelessness or operation or handling of the machine which is not in accordance with the Dyson User manual.
- Use of the machine for anything other than as a hair dryer.
- Use of the machine outside of 'normal use' which is defined as more than two hours per day.
- Use of parts not assembled or installed in accordance with the instructions of Dyson.
- Use of parts and accessories which are not genuine Dyson components.
- Faulty installation (except where installed by Dyson).
- Repairs or alterations carried out by parties other than Dyson or its authorised agents.
- Normal wear and tear (e.g. fuse etc.).

If you are in any doubt as to what is covered by your guarantee, please contact the Dyson Helpline.

#### **Summary of cover**

- The guarantee becomes effective from the date of purchase (or the date of delivery if this is later).
- You must provide proof of (both the original and any subsequent) delivery/purchase before any work can be carried out on your Dyson machine. Without this proof, any work carried out will be chargeable. Keep your receipt or delivery note.
- All work will be carried out by Dyson or its authorised agents.
- Any parts which are replaced by Dyson will become the property of Dyson.
- The repair or replacement of your Dyson machine under guarantee will not extend the period of guarantee unless this is required by local law in the country of purchase.
- The guarantee provides benefits which are additional to and do not affect your statutory rights as a consumer and will apply whether you purchased your product directly from Dyson or from a third party.

#### **Important data protection information**

When registering your Dyson machine:

- You will need to provide us with basic contact information to register your machine and enable us to support your guarantee.
  - When you register, you will have the opportunity to choose whether you would like to receive communications from us. If you opt-in to communications from Dyson, we will send you details of special offers and news of our latest innovations.
  - We never sell your information to third parties and only use information that you share with us as defined by our privacy policies which are available on our website at [privacy.dyson.com](http://privacy.dyson.com).
-

SA/UAE

# IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

When using an electrical appliance, basic precautions should always be followed, including the following:

## WARNING

THE APPLIANCE AND ATTACHMENTS CONTAIN MAGNETS.

1. Keep away from implanted medical devices such as pacemakers and defibrillators as they may be affected by strong magnetic fields. Can also affect credit cards and electronic storage media.

## WARNING

THESE WARNINGS APPLY TO THE APPLIANCE, AND ALSO WHERE APPLICABLE, TO ALL TOOLS, ACCESSORIES, CHARGERS OR MAINS ADAPTORS.

TO REDUCE THE RISK OF FIRE, ELECTRIC SHOCK, OR INJURY:

2. This Dyson appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or reasoning capabilities, or lack of experience and knowledge, only if they have been given supervision or instruction by a responsible person concerning use of the appliance in a safe way and understand the

hazards involved. Cleaning and user maintenance shall not be made by children without supervision.

3. Do not allow to be used as a toy. Close attention is necessary when used by or near children. Children should be supervised to ensure that they do not play with the appliance.
4. If the appliance is used in a bathroom, unplug after use. The proximity of water presents a hazard even when the appliance is switched off.



5. **WARNING:** Do not use this appliance near bathtubs, showers, basins or other vessels containing water.
6. If the supply cord is damaged, it must be replaced or repaired by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
7. This appliance has a non-self resetting thermal cut-out safety device to prevent overheating. If your appliance cuts out, unplug it from the mains supply socket and leave to cool.
8. **CAUTION:** In order to avoid a hazard due to inadvertent resetting of the thermal cut-out, this appliance must not be supplied through an external switching device, such as a timer, or connected to a circuit that is regularly switched on and off by the utility company, or plugged into any socket where the electrical supply is unstable or likely to be turned off.
9. For additional protection, the installation of a residual current device (RCD) having a rated residual operating current not exceeding 30mA is advisable. Ask your installer for advice.



10. Do not use the appliance for any other purpose than styling hair.
11. Do not handle any part of the plug or appliance with wet hands.
12. Do not unplug by pulling on the cable or stretch or pull the cable when in use. Do not use an extension lead and do not wrap the cable around the appliance.
13. Do not use any lubricants, cleaning agents, polishes or air fresheners on any part of the appliance.
14. Contact the Dyson Helpline when a service or repair is required. Do not disassemble the appliance as incorrect reassembly may result in an electric shock or fire.
15. If the appliance is not working as it should, if it has received a sharp blow, if it has been dropped, damaged, left outdoors, or dropped into water, do not use and contact the Dyson Helpline.
16. The appliance can be used without an attachment. For best results, the appliance should be used with the recommended attachments.



The attachments and product air exit area may become hot during use. Allow them to cool before handling.

## Additional information

### Looking after your Dyson machine

- Do not carry out any maintenance or repair work other than that shown in your Dyson User manual, or advised by the Dyson Helpline.
- Always disconnect the plug from the mains before inspecting for problems. If the machine will not operate, first check the mains socket has an electricity supply and that the plug is properly inserted into the socket.

### Disposal information

- Dyson products are made from high grade recyclable materials. Recycle where possible.

### Guarantee terms and conditions

Please contact Ayan Trading (SA) or Jumbo Electronics Co. Ltd (LLC) (UAE) for the terms and conditions of your guarantee.

Please keep your invoice to validate your guarantee.

### Important data protection information

When registering your Dyson machine:

- You will need to provide us with basic contact information to register your machine and enable us to support your guarantee.
  - When you register, you will have the opportunity to choose whether you would like to receive communications from us. If you opt-in to communications from Dyson, we will send you details of special offers and news of our latest innovations.
  - We never sell your information to third parties and only use information that you share with us as defined by our privacy policies which are available on our website [privacy.dyson.com](http://privacy.dyson.com).
-



## معلومات إضافية

الاعتناء بجهاز دايسون

- لا تُجري أي أعمال صيانة أو إصلاح بخلاف تلك الموضحة في دليل تشغيل دايسون، أو التي ينصح بها خط المساعدة التابع لشركة دايسون.
- الزعي دوماً المقيس عن مصدر الكهرباء الرئيسي قبل الفحص لاستكشاف المشكلات. إذا لم يعمل الجهاز، فتتحقق أولاً من أن مقبس الكهرباء متصل بالكهرباء وأن القابس قد تم إدخاله بشكل سليم في المقبس.

معلومات التخلص من الجهاز

- منتجات Dyson مصنوعة من مواد عالية الجودة قابلة لإعادة التدوير. لذلك عليك بإعادة تدويرها كلما كان ذلك ممكناً.

شروط وأحكام الضمان


للحصول على المعلومات والإرشادات الخاصة بالضمان، الرجاء الاتصال بشركة Ayan Trading (المملكة العربية السعودية) أو Jumbo Electronics Co. Ltd (الإمارات العربية المتحدة).  
تنبيه: الرجاء الاحتفاظ بفاتورة الشراء لتأكيد الضمان.

معلومات مهمة حول حماية البيانات

عند تسجيل منتج Dyson الخاص بك:

- ستحتاج إلى تزويدنا بمعلومات الاتصال الأساسية لتسجيل منتجك وتمكيننا من دعم الضمان الخاص بك.
- عند التسجيل، سيكون لديك الفرصة لاختيار ما إذا كنت ترغب في تلقي رسائل منا أم لا. إذا وافقت على تلقي رسائل من Dyson، فسنرسل لك تفاصيل العروض الخاصة والأخبار المتعلقة بأحدث الابتكارات لدينا.
- نحن لا نبيع مطلقاً معلوماتك إلى جهات أخرى كما أننا نستخدم المعلومات فقط التي تشاركها معنا على النحو الذي تحدده سياسات الخصوصية لدينا المتوفرة على موقع الويب الخاص بنا  
[privacy.dyson.com](http://privacy.dyson.com)

12. لا تفصلي الجهاز من المقبس عن طريق سحب الكابل أو شده أو سحب الكابل أثناء الاستخدام. لا تستخدمى وصلة إطالة ولا تلف الكابل حول الجهاز.
13. لا تستخدمى أي مواد تشحيم أو مواد منظفة أو ملمعة أو معطرات الهواء على أي جزء من الجهاز.
14. اتصلي بخط المساعدة التابع لشركة Dyson عند الحاجة إلى إجراء صيانة أو إصلاح. لا تقومي بفك الجهاز حيث قد تؤدي إعادة تركيبه بطريقة غير صحيحة إلى حدوث صدمة كهربية أو نشوب حريق.
15. إذا لم يعمل الجهاز كما يجب أو تلقى ضربة قوية أو سقط أو تلف أو تُرك في مكان مكشوف أو سقط في الماء، فلا تستخدميه واتصلي بخط المساعدة التابع لشركة Dyson.
16. مُكن استخدام الجهاز دون أيّ من الملحقات. للحصول على أفضل نتائج، يجب استخدام الجهاز مع الملحقات الموصى بها.

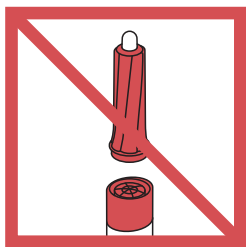

قد تصبح الملحقات ومنطقة مخرج هواء المنتج ساخنة أثناء الاستخدام. اتركها لتبرد قبل الاستخدام.

3. لا تسمحي باستخدام الجهاز كلعبة. ومن الضروري الانتباه جيداً عند استخدام الجهاز من جانب الأطفال أو بالقرب منهم. ينبغي مراقبة الأطفال لضمان عدم عبثهم بالجهاز.
4. إذا استخدمت الجهاز في الحمام، فقمومي بفصله بعد الاستخدام. ينطوي تقريب الجهاز من الماء على مخاطر حتى عند قفله.



5. تحذير: لا تستخدم هذا الجهاز بالقرب من أحواض الاستحمام أو الدش أو الأحواض أو غيرها من الأوعية التي تحوي ماءً.
6. وإذا كان هناك تلف في كابل الكهرباء، فيجب استبداله أو إصلاحه بمعرفة الشركة المصنعة أو وكيل الصيانة التابع لها أو أي شخص يتمتع بدرجة مشابهة من التأهيل، لتجنب التعرض لأي خطر.
7. يحتوي هذا الجهاز على جهاز سلامة لخفض الحرارة تدريجياً غير قابل لإعادة الضبط تلقائياً لمنع ارتفاع درجة الحرارة. إذا توقف الجهاز عن العمل، فافصله من مقبس مصدر الطاقة واتركه ليبرد.
8. تنبيه: لتجنب وقوع المخاطر الناتجة عن إعادة الضبط غير المتعمدة لخفض الحرارة تدريجياً، يجب ألا يتم تزويد هذا الجهاز بالطاقة من خلال جهاز تحويل خارجي، كجهاز توقيت، أو توصيله بدائرة يتم غلقها وفتحها بانتظام من جانب شركة الكهرباء أو يتم توصيله بأي مقبس يكون فيه مصدر غير مستقر للطاقة أو من المحتمل أن يتم قفله.
9. لمزيد من الحماية، يُنصح بتركيب جهاز قاطع للدائرة (RCD) به تيار متبقٍ كافٍ للتشغيل لا يتجاوز 30 ملي أمبير. اطلبي جهازاً من عامل التركيب الخاص بك. اطلبي المشورة من عامل التركيب الخاص بك.
10. لا تستخدم الجهاز لأي أغراض أخرى بخلاف تصفيف الشعر.
11. لا تتعاملي مع أي جزء من المقبس أو الجهاز بيدين مبتلتين.

## إرشادات مهمة للسلامة

اقرأ جميع الإرشادات قبل الاستخدام

عند استخدام جهاز كهربائي، ينبغي دومًا اتباع الاحتياطات الأساسية، بما في ذلك ما يلي:

### ⚠ تحذير

يحتوي الجهاز والملحقات على مغناطيس.

1. حافظ عليه بعيدًا عن الأجهزة الطبية المزروعة مثل ناظمات القلب الاصطناعية وأجهزة صدمات القلب الكهربائية إذ إنها قد تتأثر بالمجالات المغناطيسية القوية. ويمكن أن يؤثر أيضًا على بطاقات الائتمان ووسائط التخزين الإلكترونية.

### ⚠ تحذير

تنطبق هذه التحذيرات على الجهاز، كما تنطبق حسب مقتضى الحال، على كافة الأدوات أو الملحقات أو أجهزة الشحن ومحولات التيار.

للحد من خطر نشوب حريق أو حدوث صدمة كهربائية أو إصابة بدنية:

2. يمكن استخدام جهاز دايسون بواسطة الأطفال من سن 8 أعوام فأكبر وكذلك بواسطة الأشخاص ذوي القدرات البدنية أو الحسية أو الذهنية المحدودة أو الذين تنقصهم الخبرة والمعرفة، وذلك بشرط أن يتوفر لهم الإشراف أو التوجيه من قبل شخص مسؤول فيما يتعلق باستخدام الجهاز على نحو آمن وأن يكونوا مدركين للمخاطر التي ينطوي عليها استخدام الجهاز. يجب ألا تتم أعمال التنظيف والصيانة الخاصة بالمستخدم بواسطة الأطفال دون الإشراف عليهم.

## الامتثال التنظيمي ومعلومات السلامة